




DESIGNED FOR LIFE

# Assembly Instructions

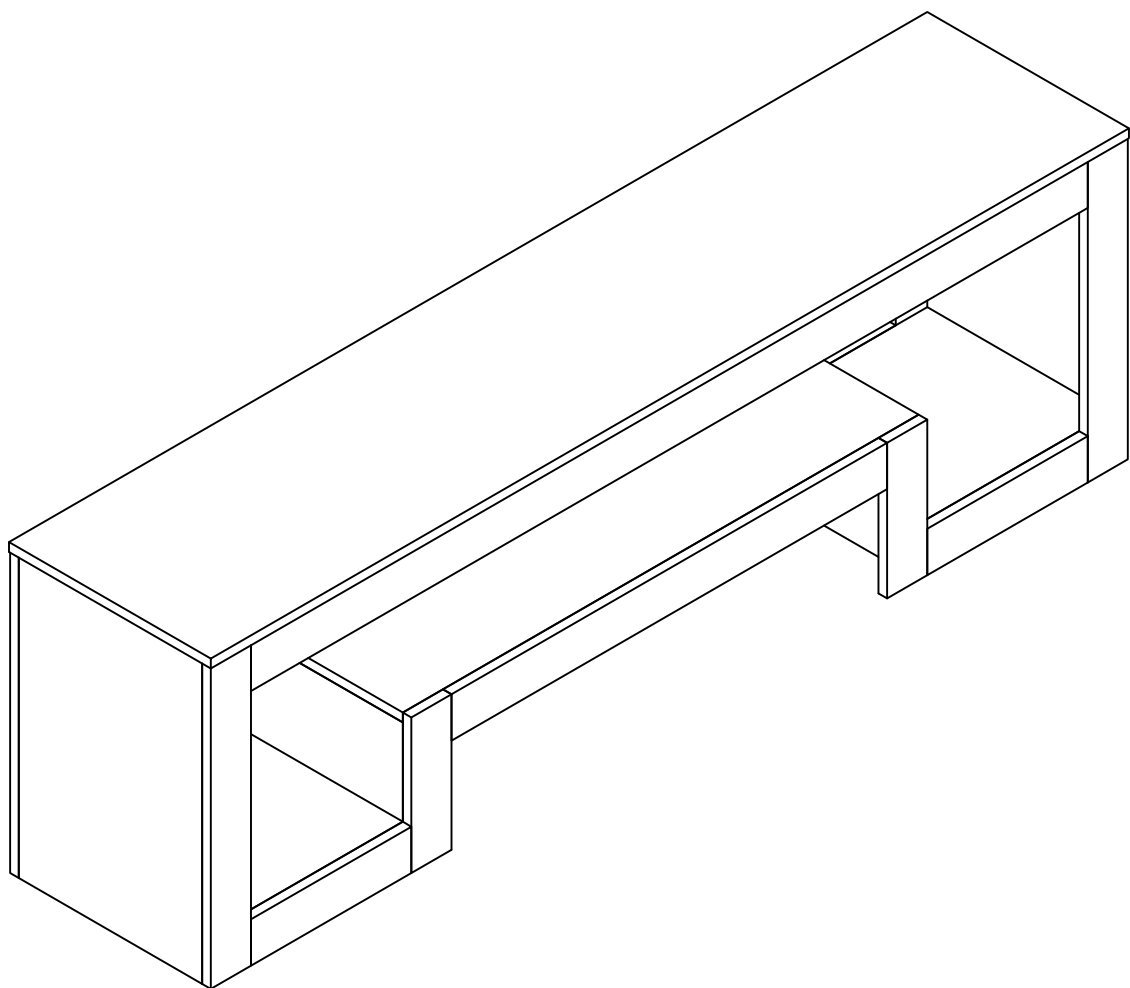

Television Stand

Model No.  
HOGA-RY0262



[www.tribesign.com](http://www.tribesign.com)



# Contact Us

## We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

### Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

### How to Get the Assembly Video




**Step 1**

Scan the QR code.

**Step2**


Search with the Model No.  
(on the bottom left corner of the title page)

Note: If you can't find the assembly video, please contact us.

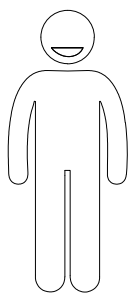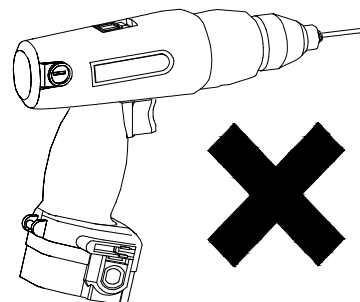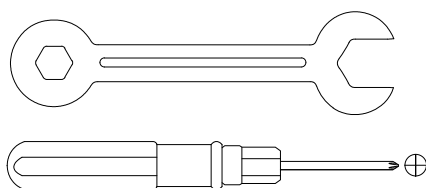**X2**



**We recommend using hand tools for assembly.**


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

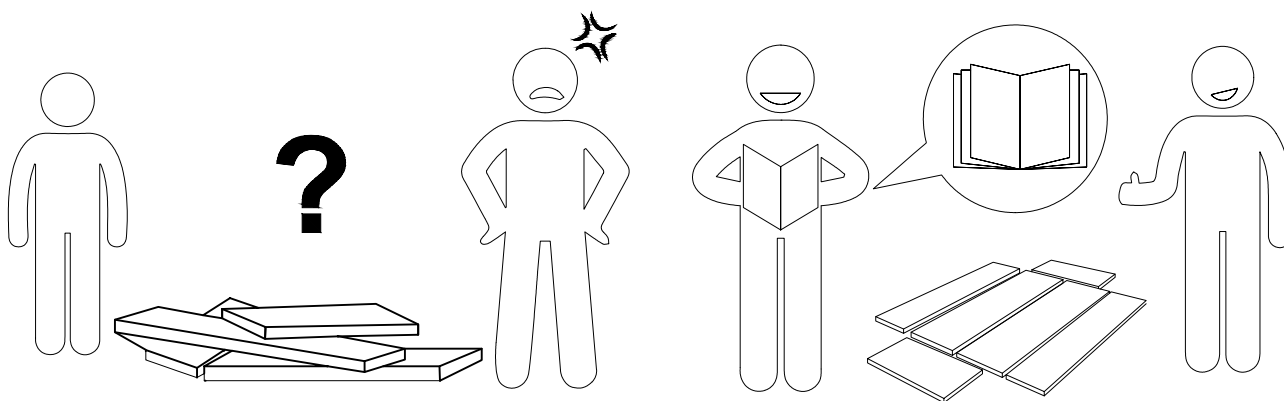

## AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

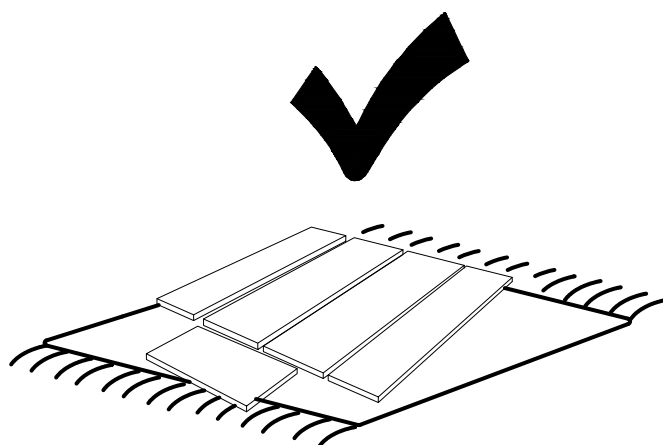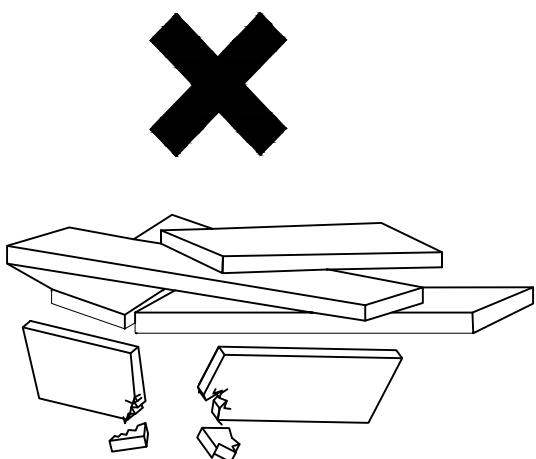
















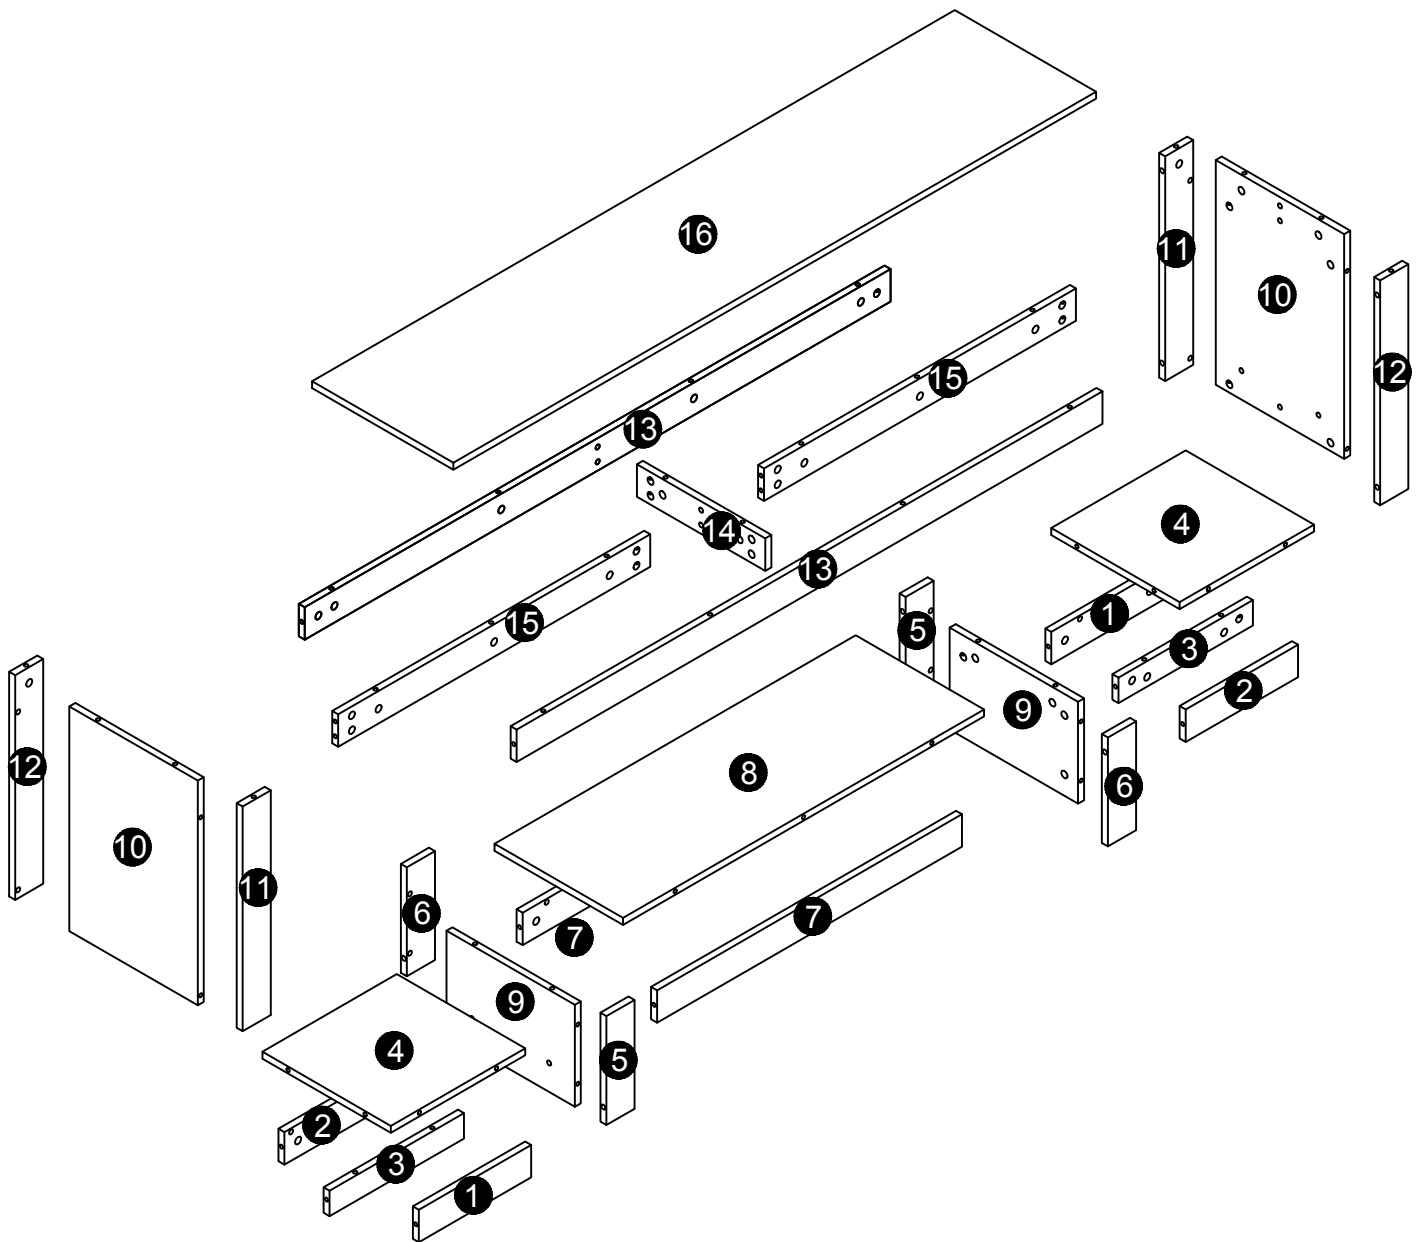


**⚠ Caution**

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.








## Parts List
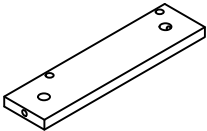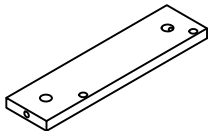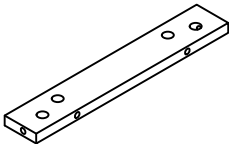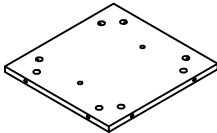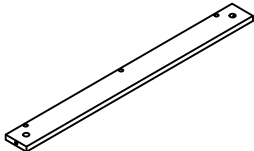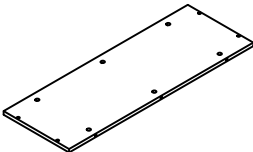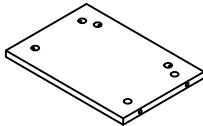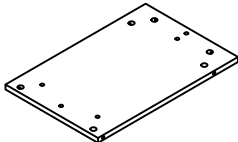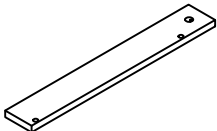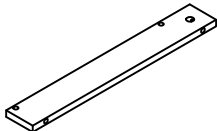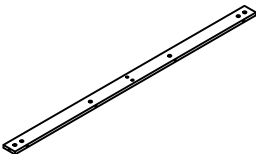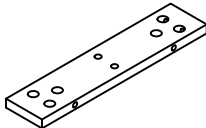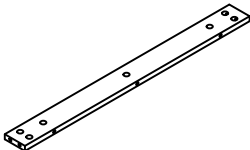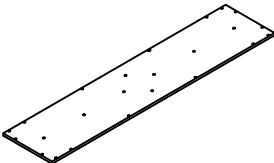
<b>1</b>  2 pcs	<b>2</b>  2 pcs	<b>3</b>  2 pcs	<b>4</b>  2 pcs	<b>5</b>  2 pcs
<b>6</b>  2 pcs	<b>7</b>  2 pcs	<b>8</b>  1 pc	<b>9</b>  2 pcs	<b>10</b>  2 pcs
<b>11</b>  2 pcs	<b>12</b>  2 pcs	<b>13</b>  2 pcs	<b>14</b>  1 pc	<b>15</b>  2 pcs
<b>16</b>  1 pc				




Hardware List

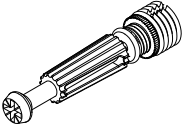A	B	C	D	E	
 M6x40mm	 Ø15x12mm		 M6x40mm		
98pcs	102 pcs	12 pcs	4 pcs	1pc	





## Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.  
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

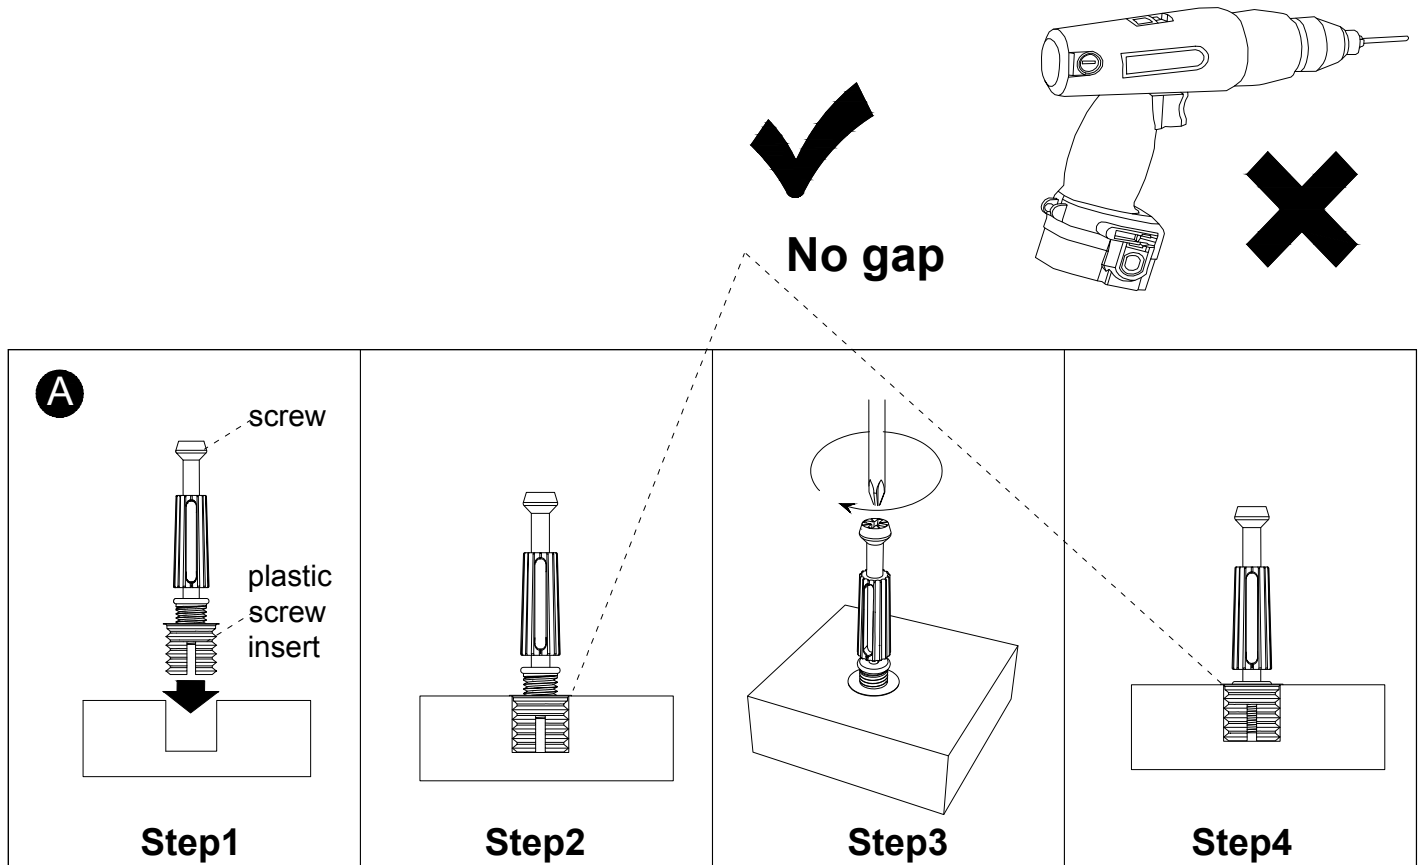


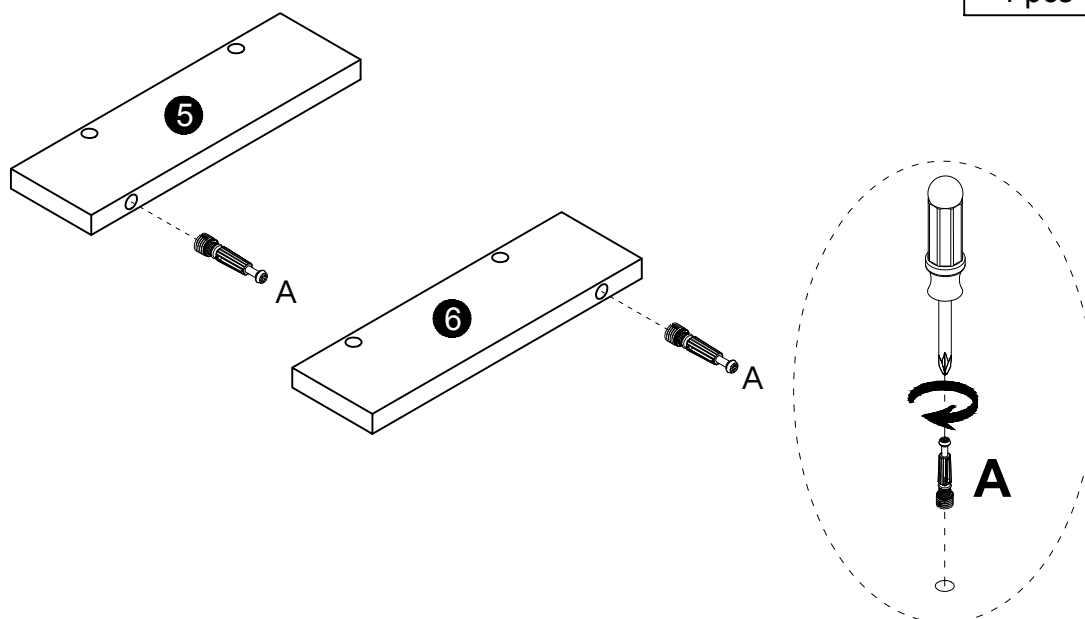
Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

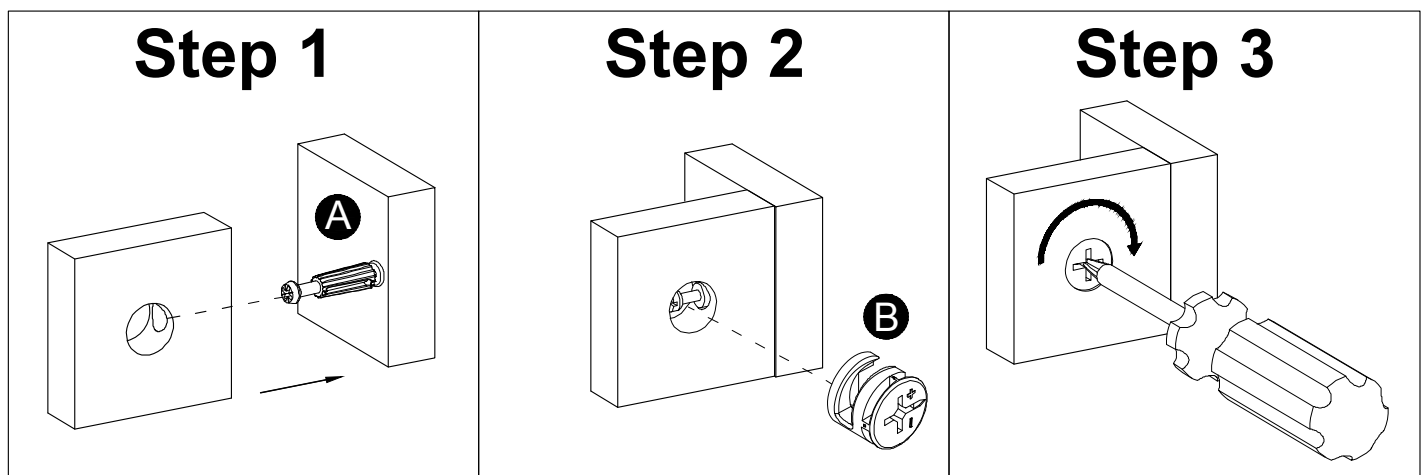




1



A

M6x35mm
4 pcs



x2

2

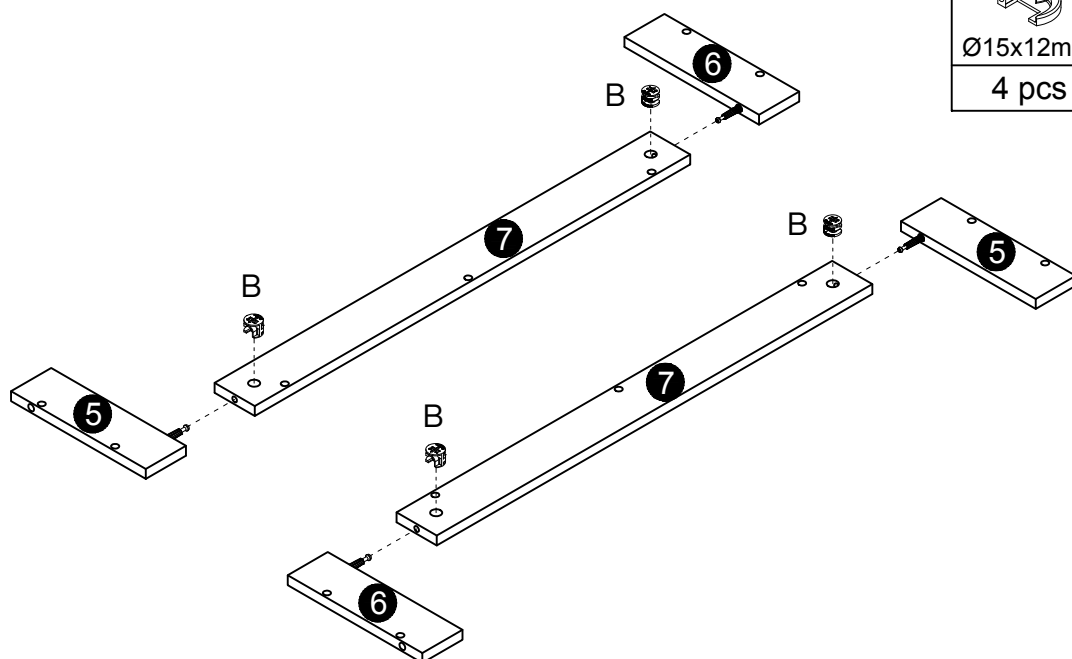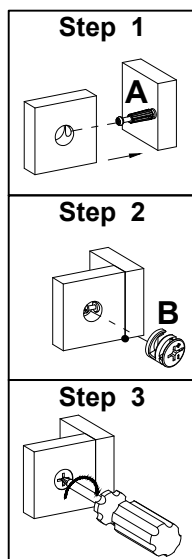
B

Ø15x12mm
4 pcs






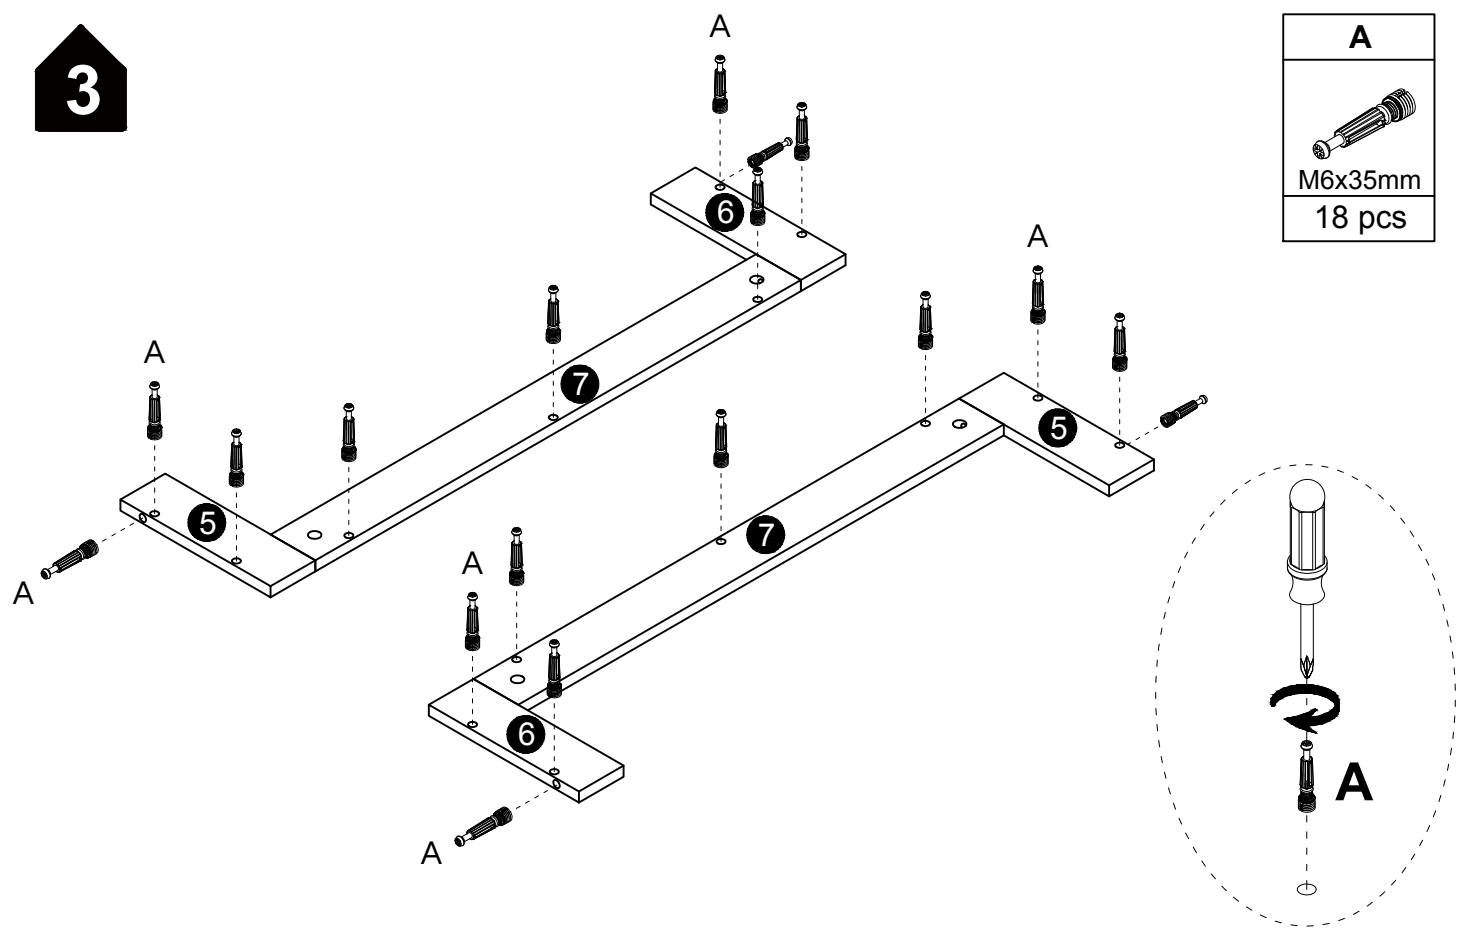

**3**





**4**

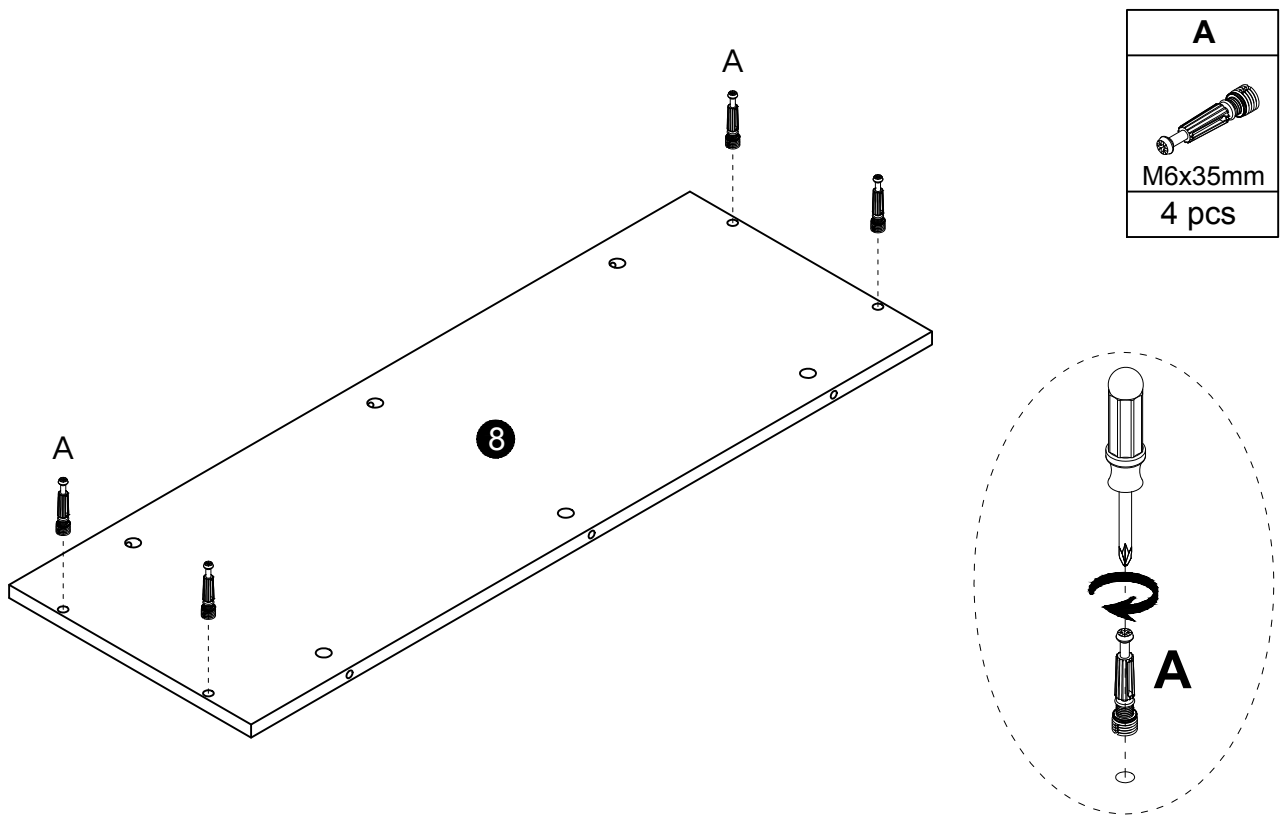




5


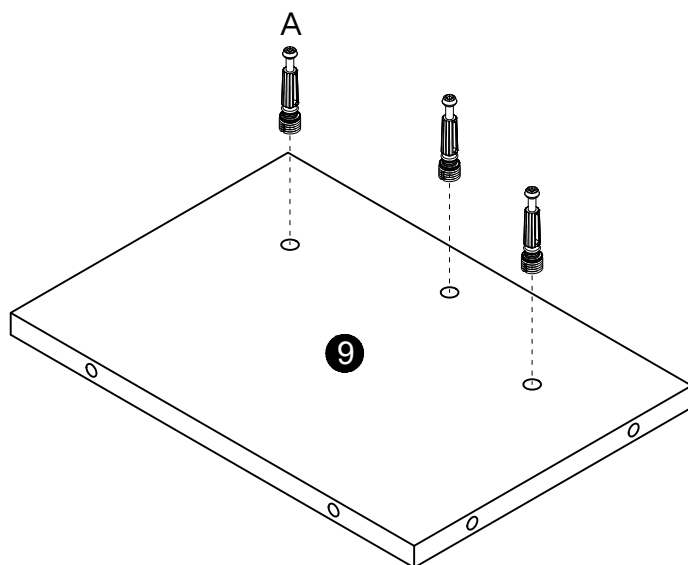



A

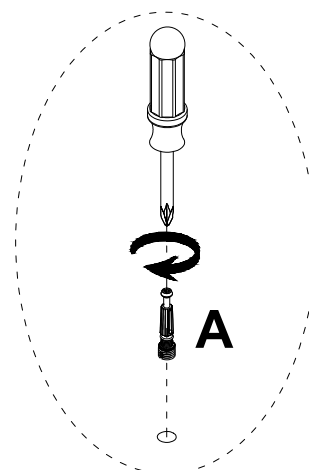M6x35mm
6 pcs



x2


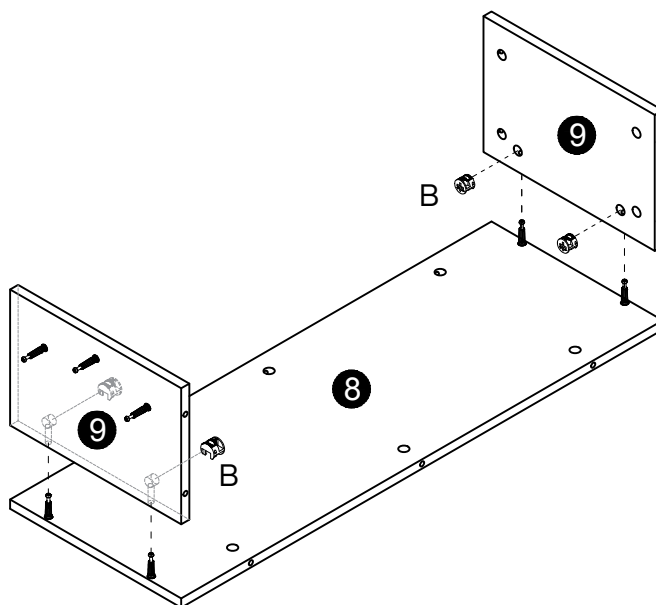
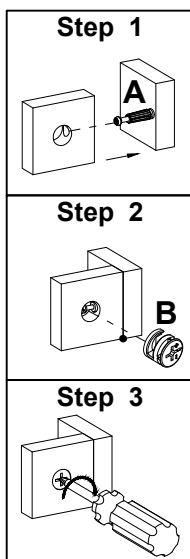
6






B

Ø15x12mm
4 pcs

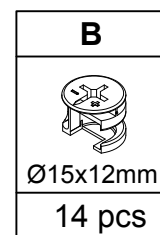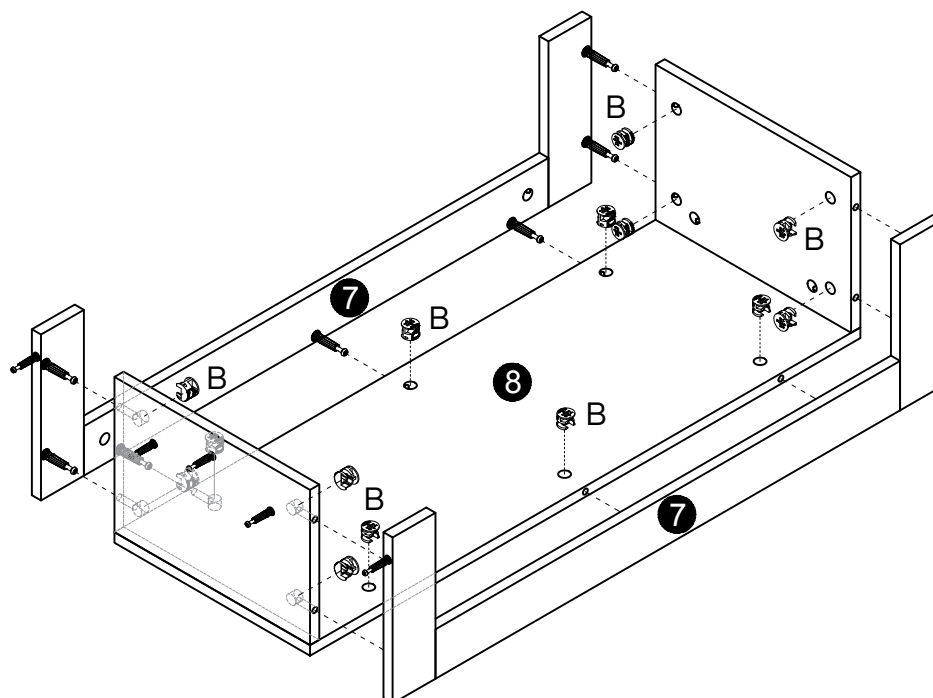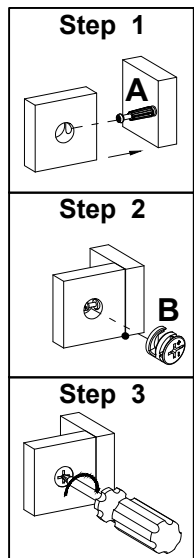

7

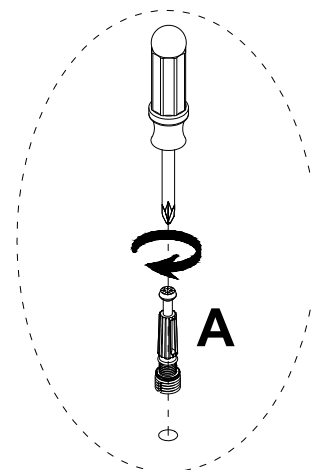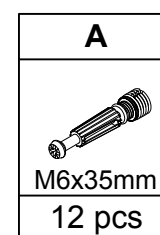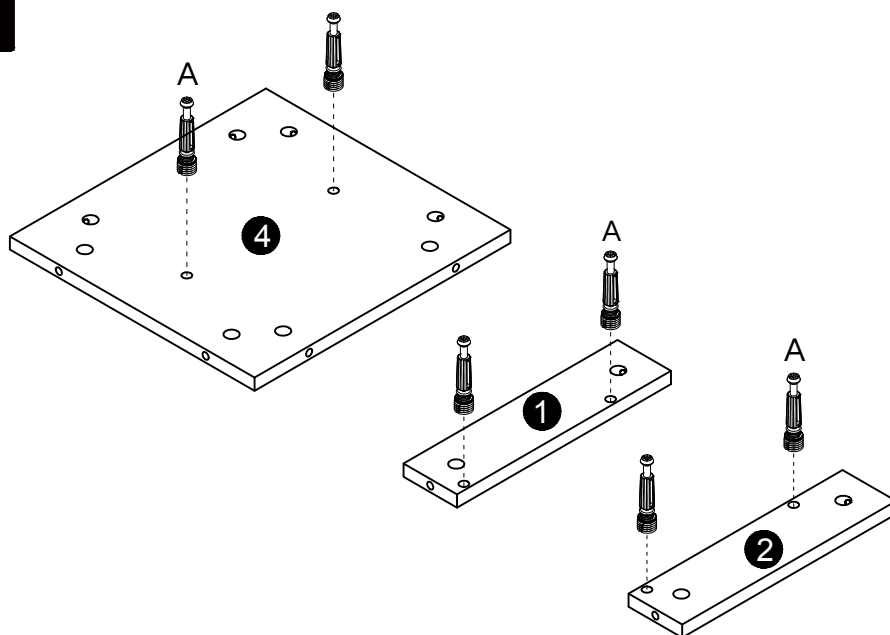

8



x2



9


B




Ø15x12mm

4 pcs



Step 1

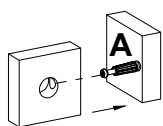

Step 2

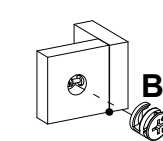

Step 3

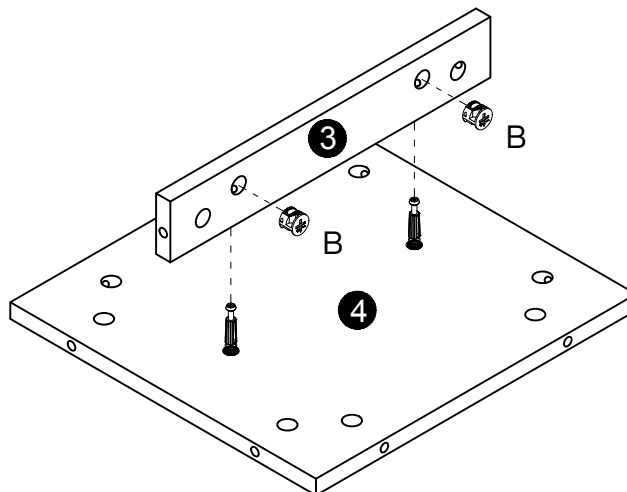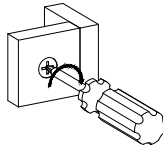

x2

10


B




Ø15x12mm

8 pcs



Step 1

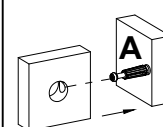

Step 2

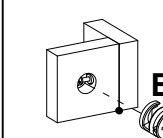



Step 3

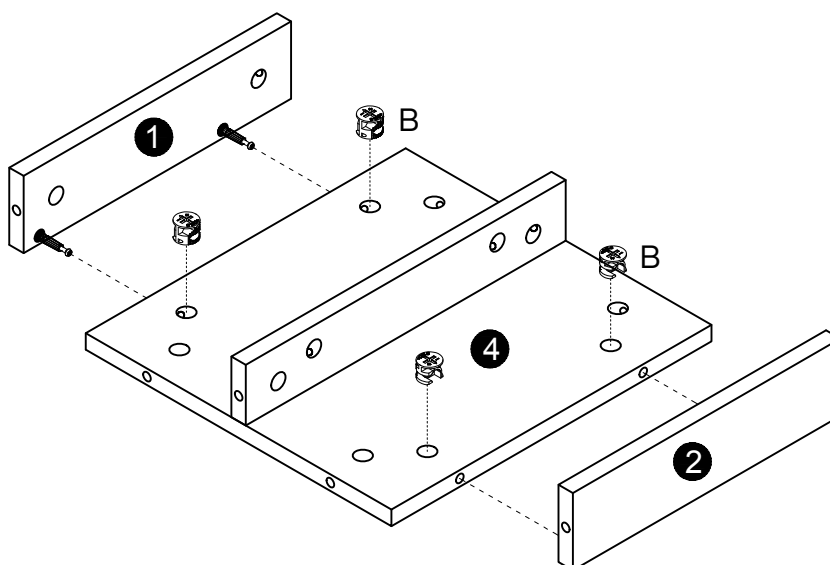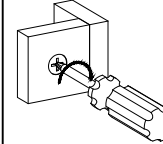


x2






11

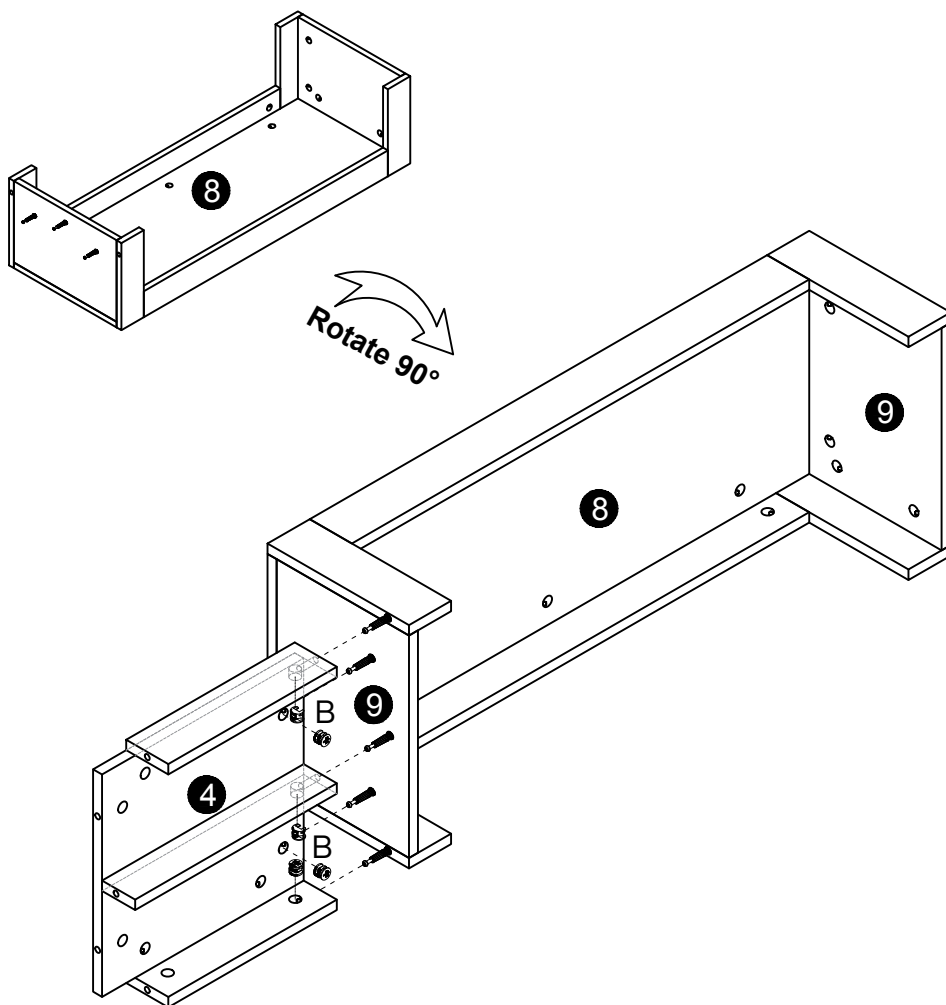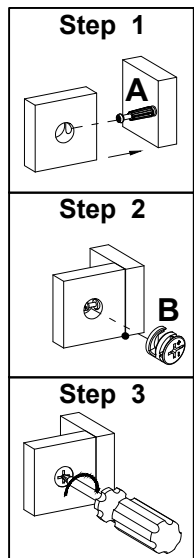

B

Ø15x12mm
5 pcs

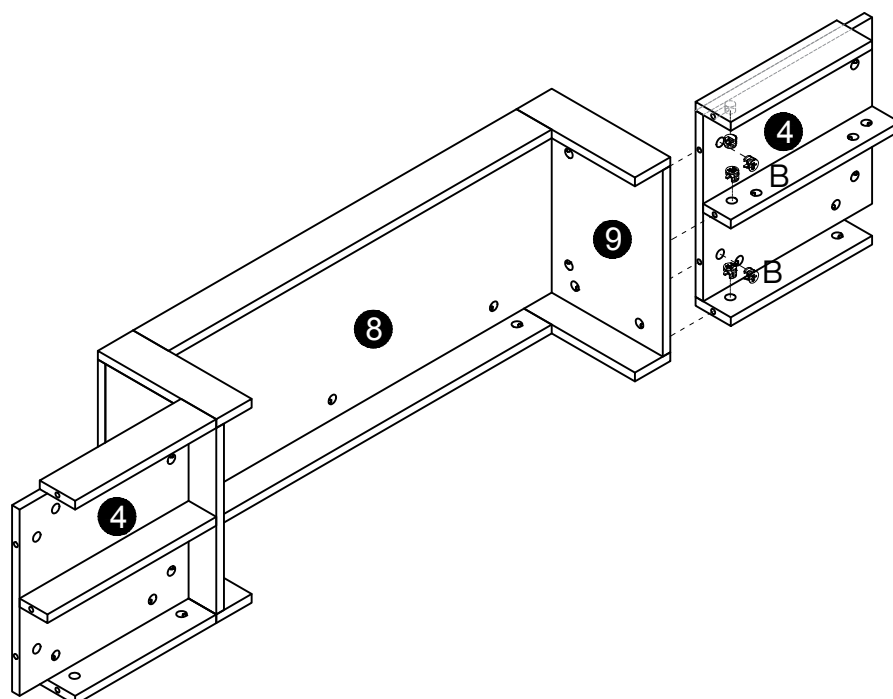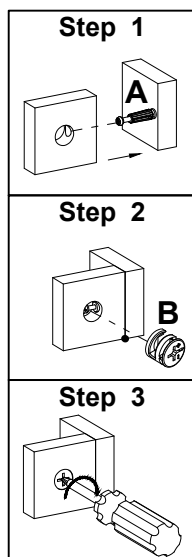
12





B

Ø15x12mm
5 pcs




**13**

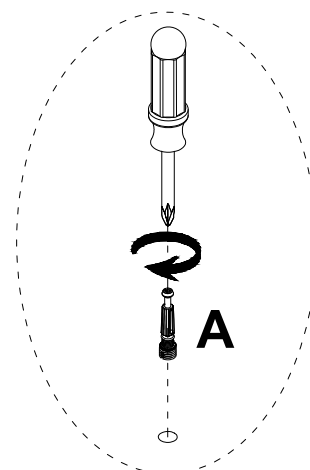
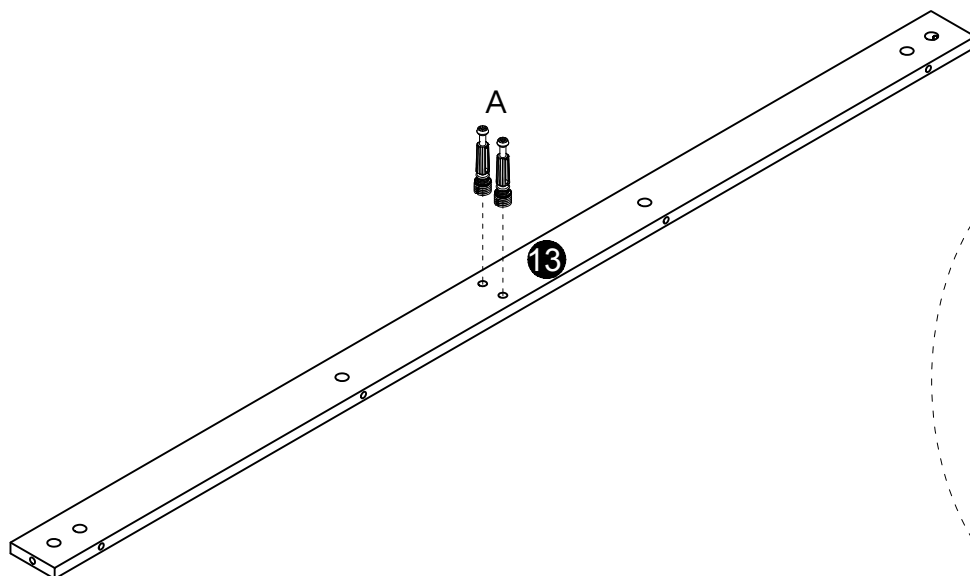
A

M6x35mm
4 pcs





**x2**

**14**

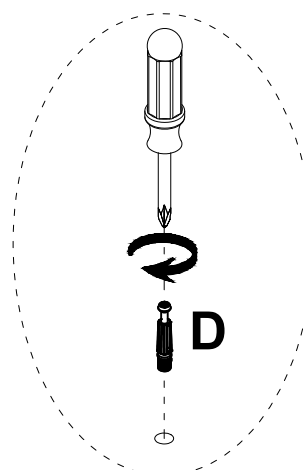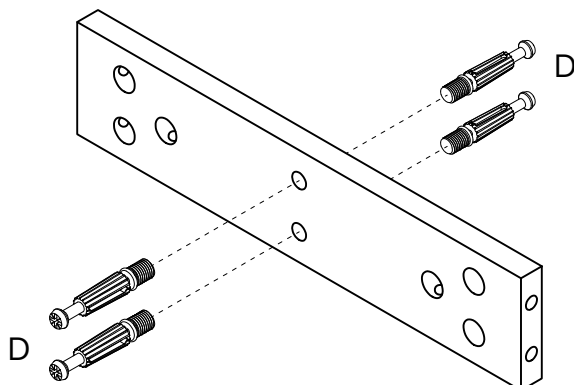D

M6x35mm
4pcs

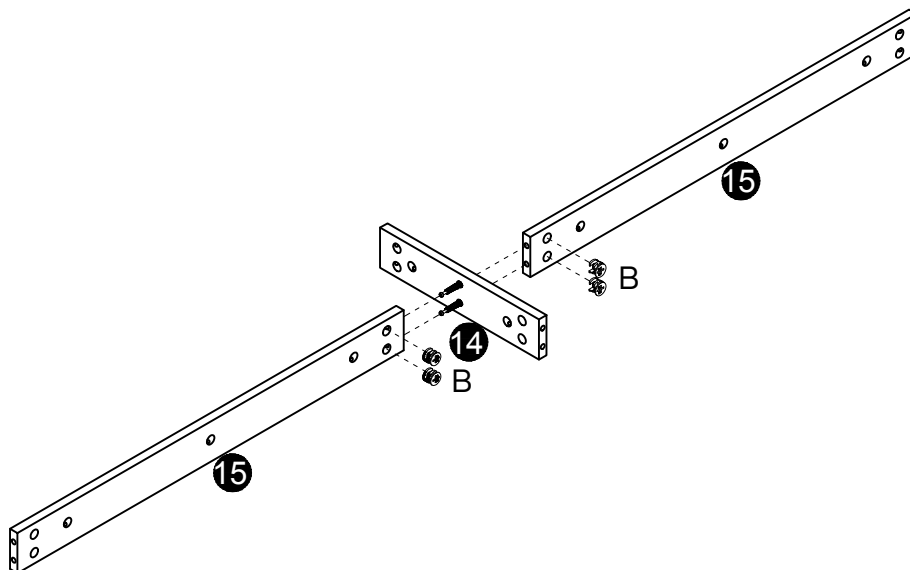
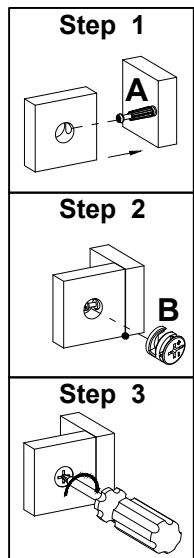


**15**



B
Ø15x12mm
4 pcs

**16**

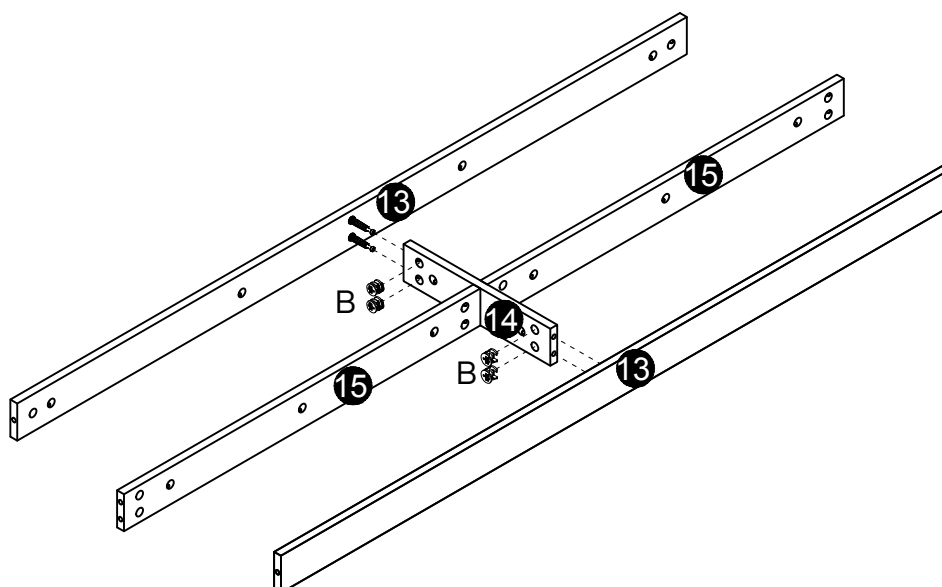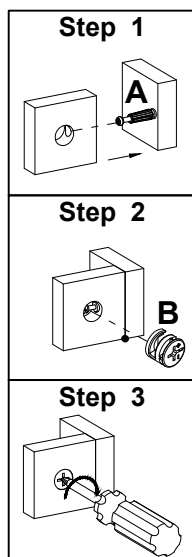


B
Ø15x12mm
4 pcs



**17**


A



M6x35mm
8 pcs

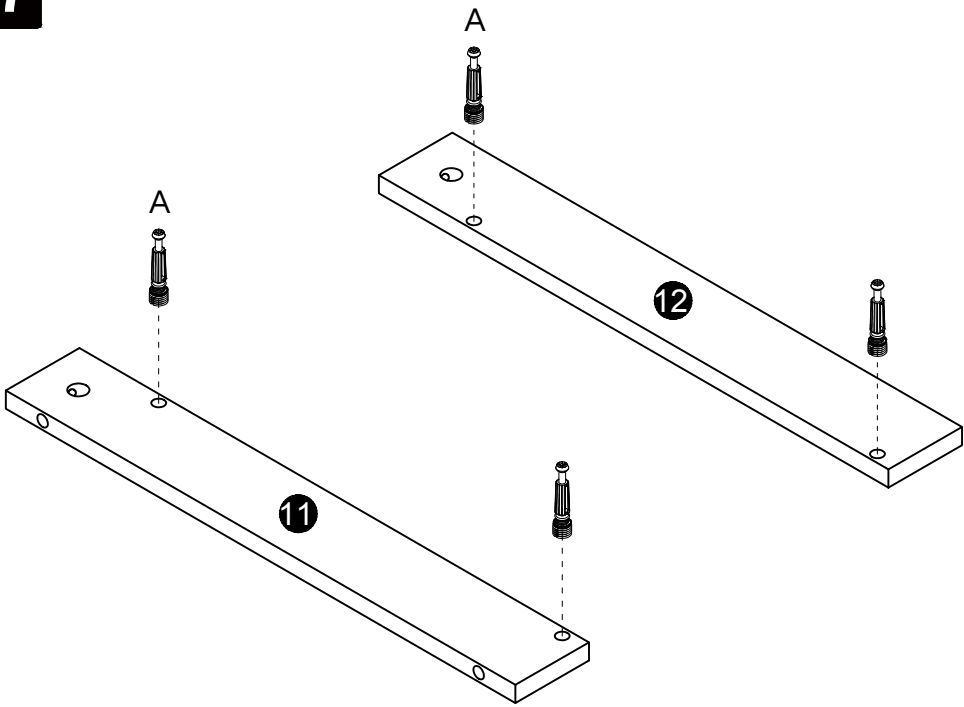

**x2**


**18**


B

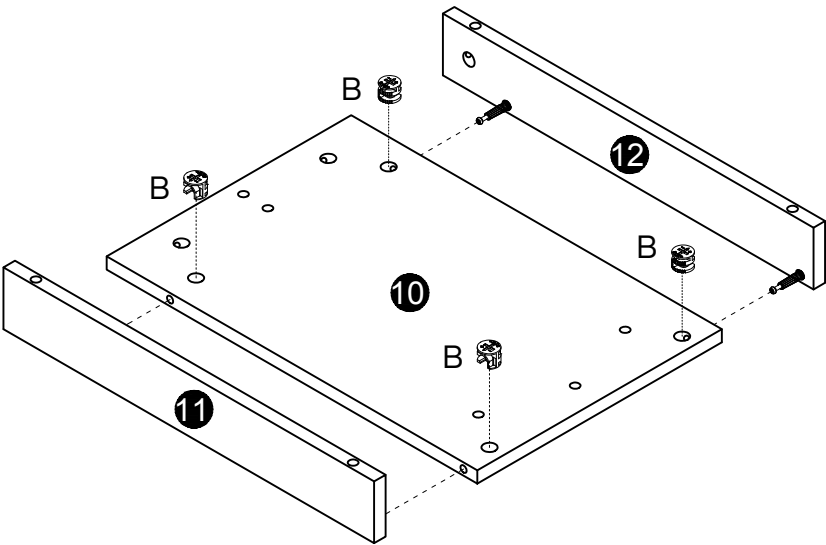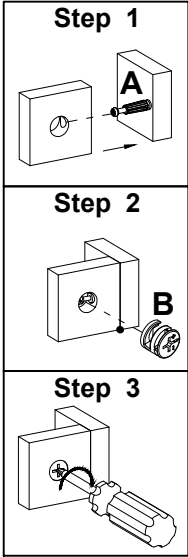Ø15x12mm
8 pcs







**x2**

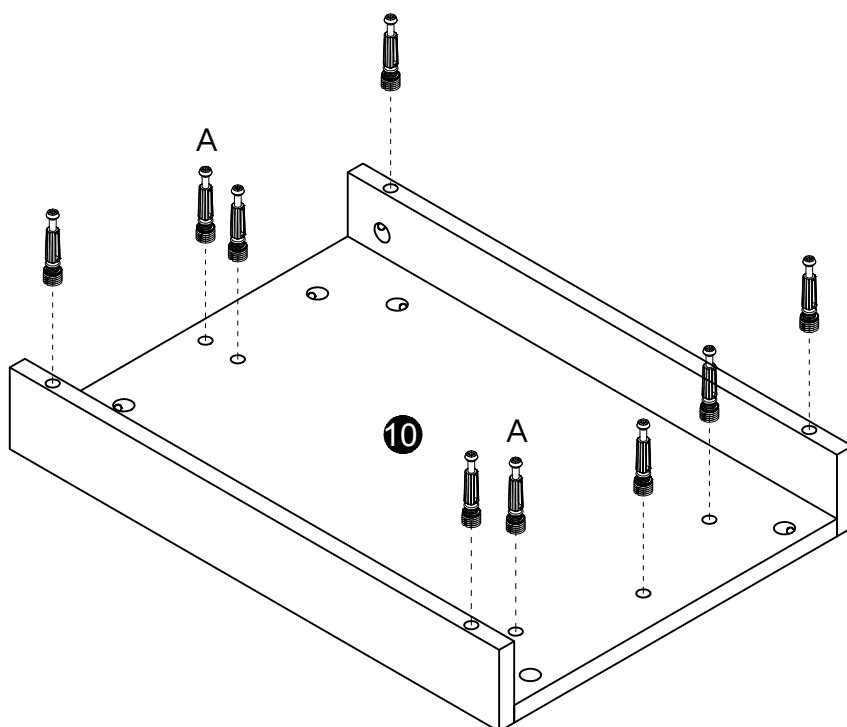




**19**


A

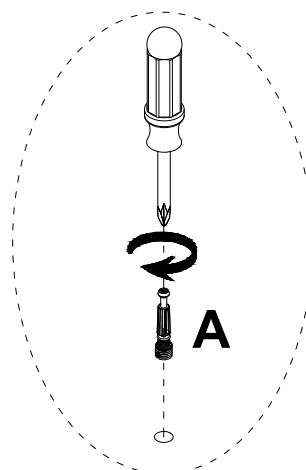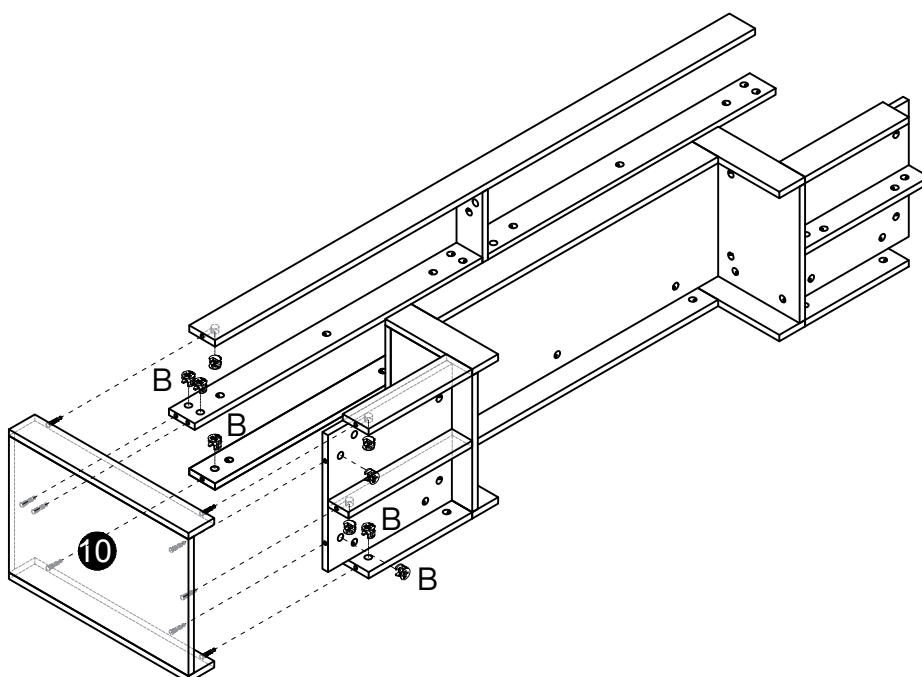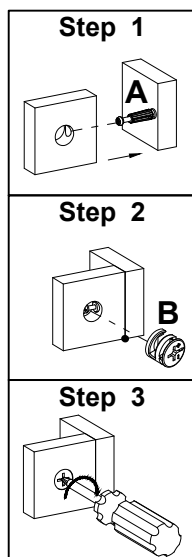M6x35mm
18 pcs





**x2**
**20**


B

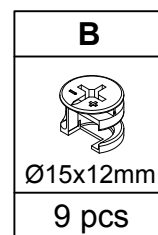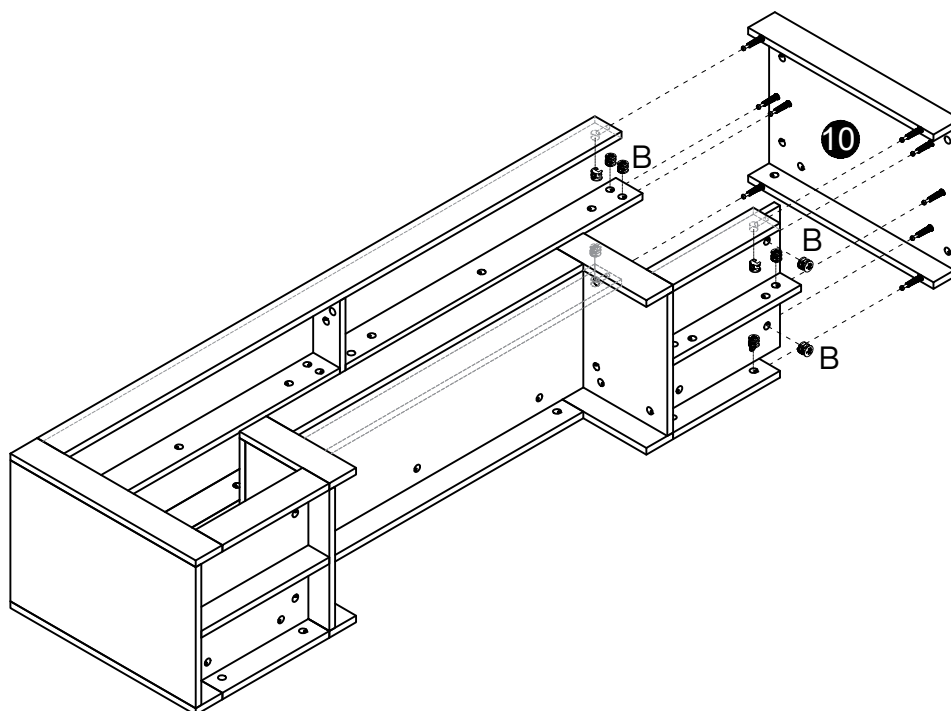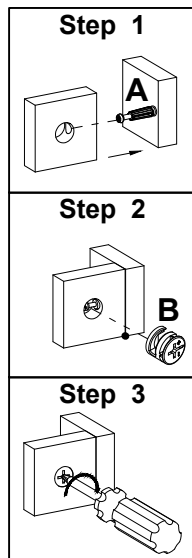Ø15x12mm
9 pcs

# 21

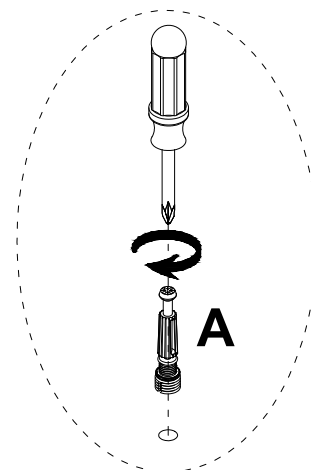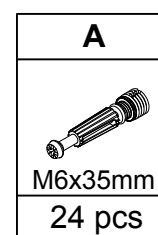
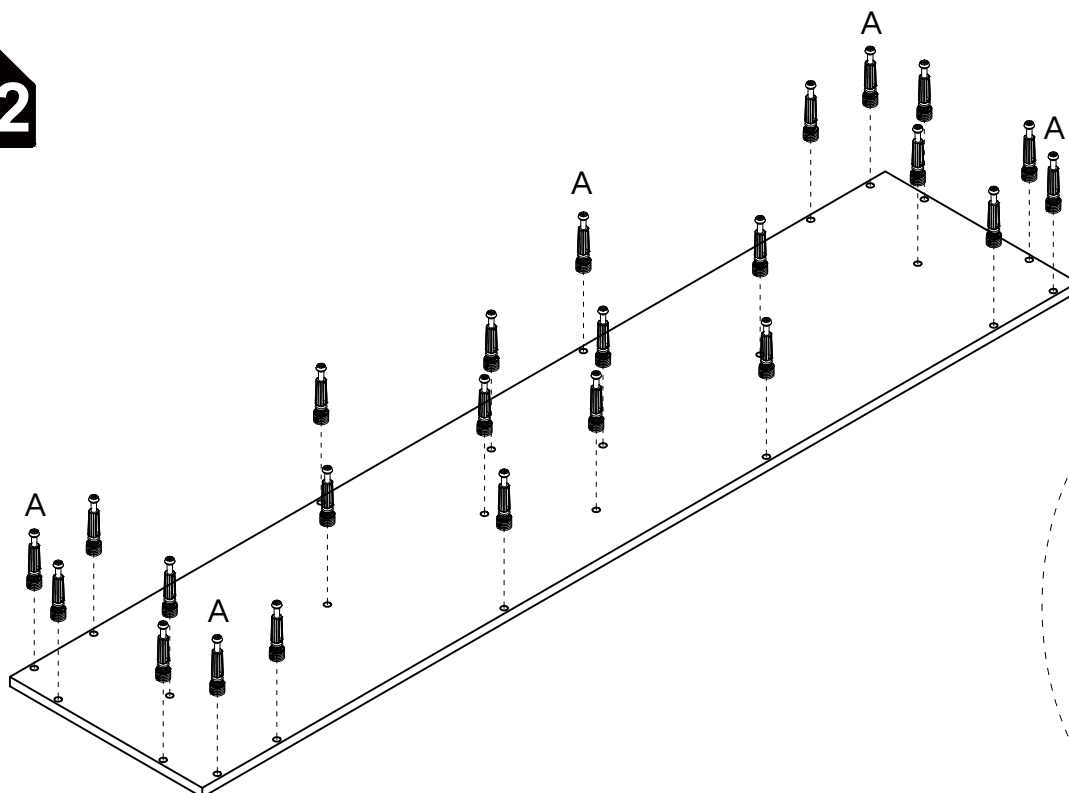


# 22








23

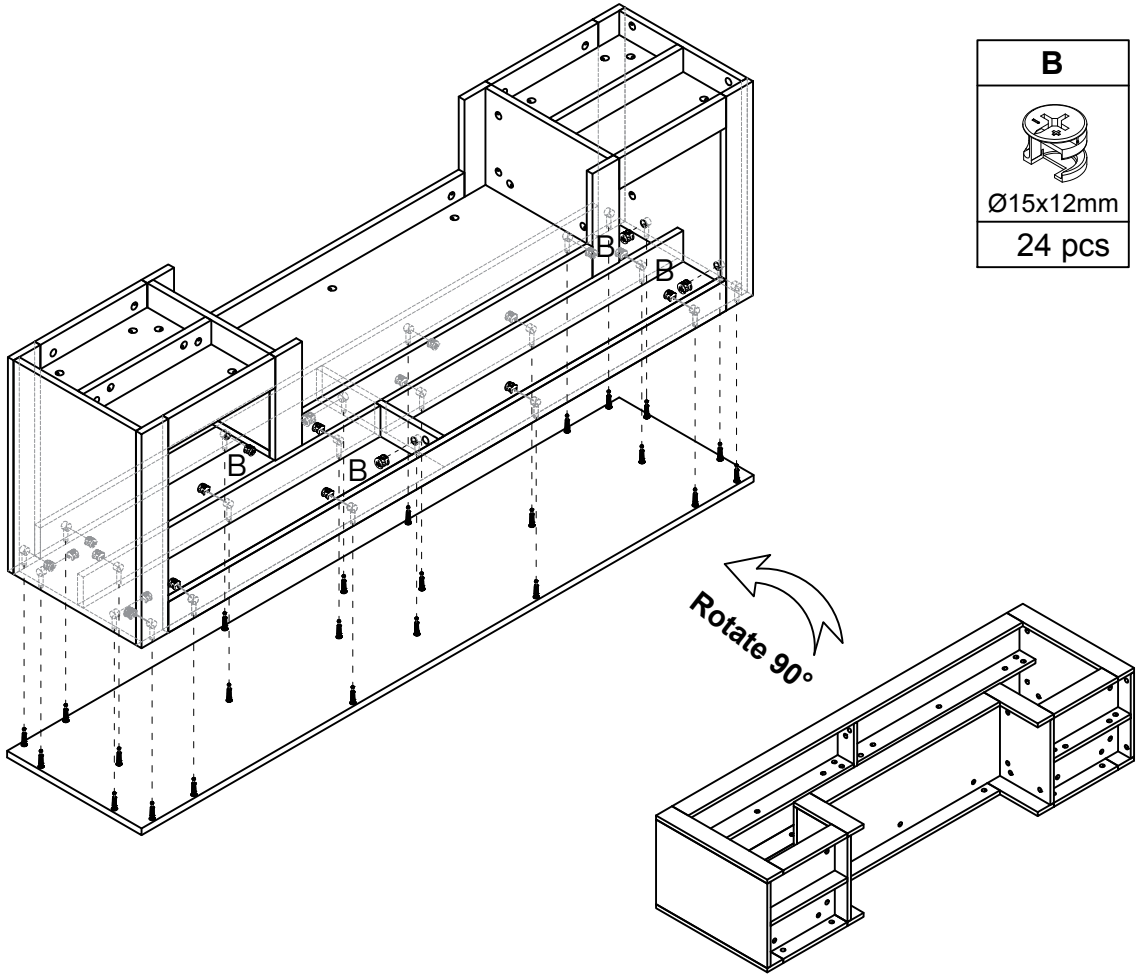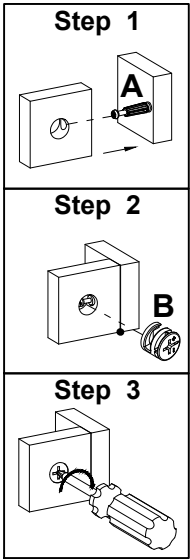

22

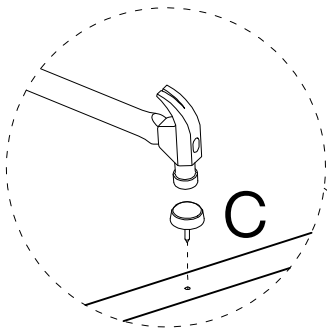


**⚠ Caution! Tap lightly**

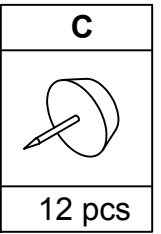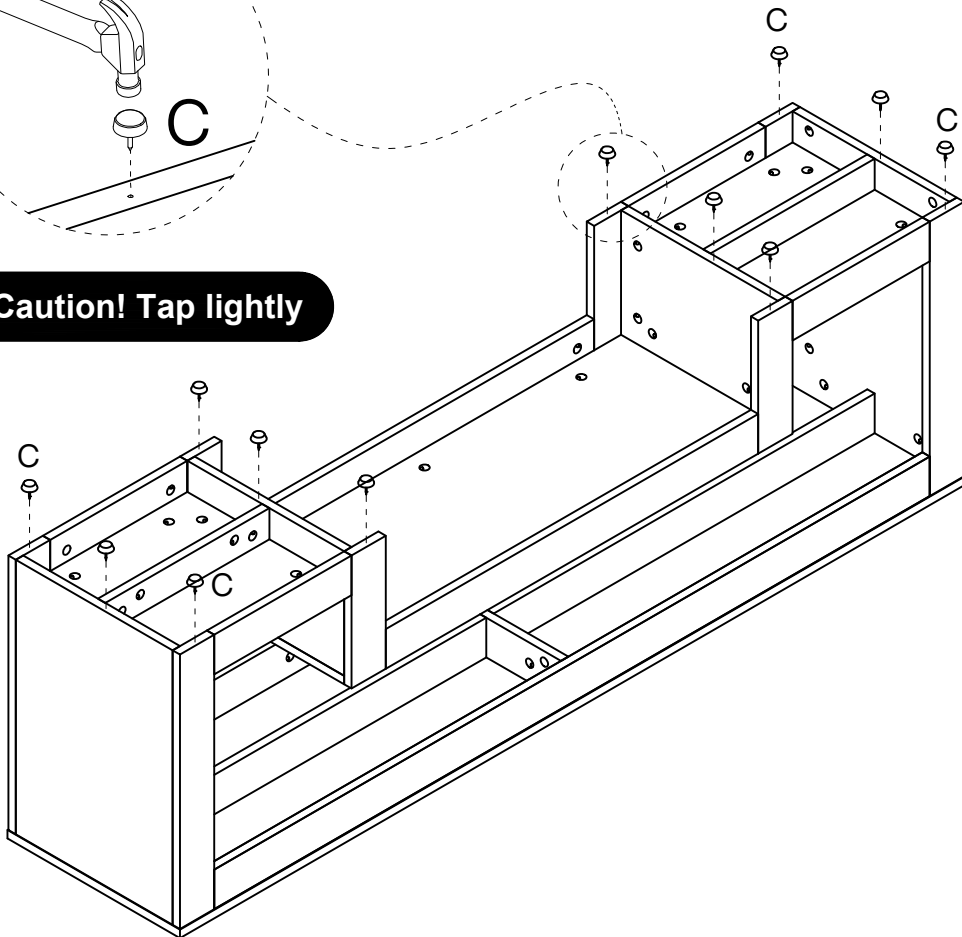



DESIGNED FOR LIFE

Thank you for your support !

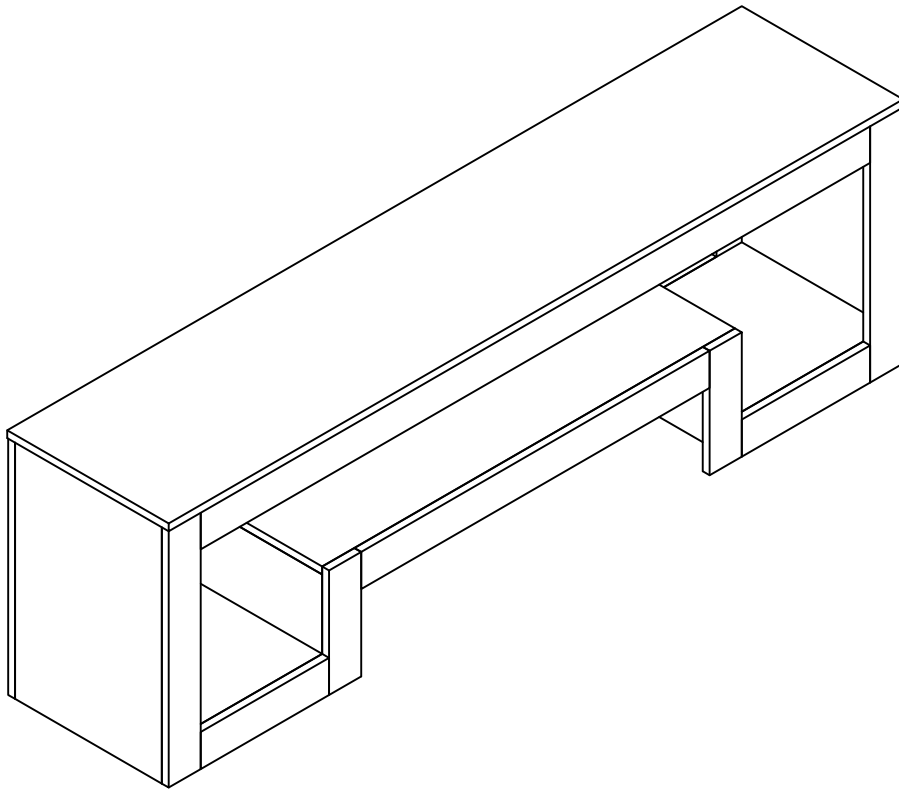

### Contact our customer service team



support@tribesigns.com  
www.tribesigns.com



1-424-220-6888

7 AM to 8 PM EST,  
Monday to Friday

### Follow Tribesigns



Facebook



Instagram



Pinterest



Twitter



YouTube



TikTok



WhatsApp