




DESIGNED FOR LIFE

Assembly Instructions

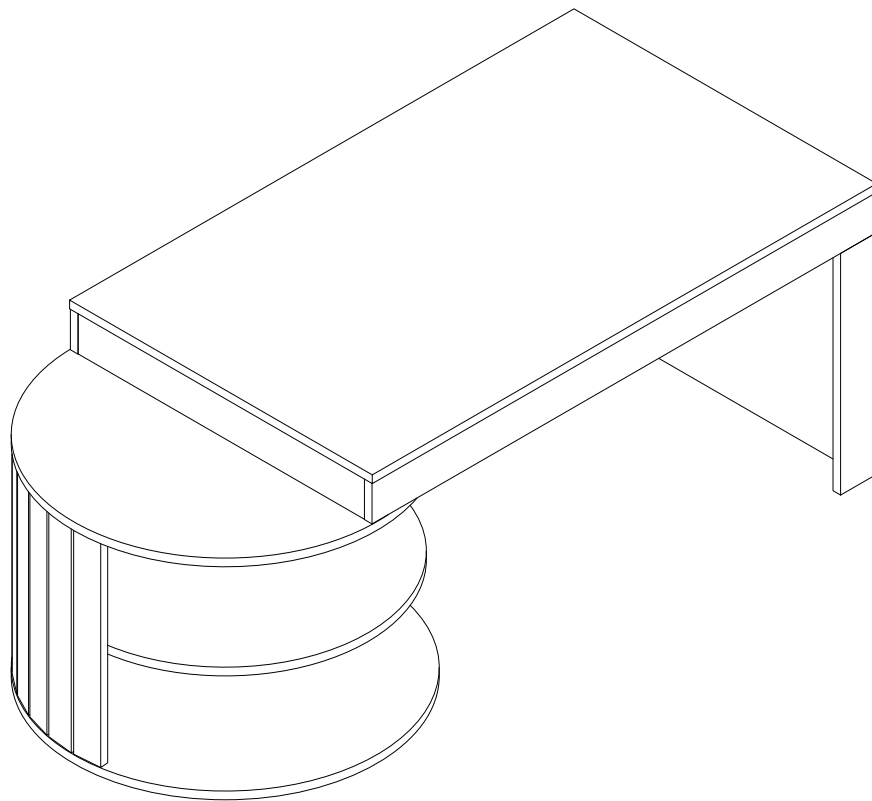

Coffee table

Model No.
HOGA-RY0260



LITTLE TREE
Little Tree by Tribesigns

www.tribesign.com



Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

Step 1


Scan the QR code.



Installation Video




Step2

Search with the Model No.
(on the bottom left corner of the title page)

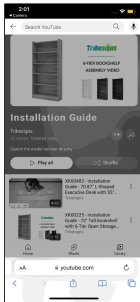


HOGA-RY0260

Note: If you can't find the assembly video, please contact us.

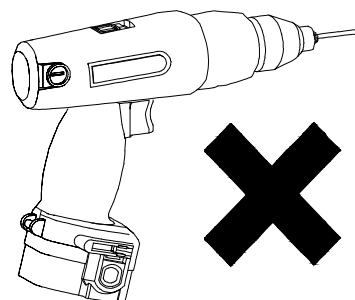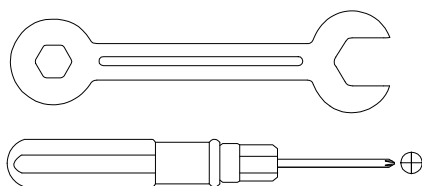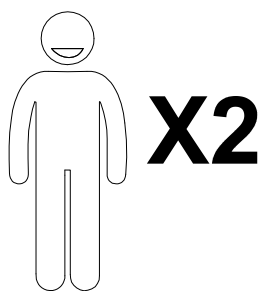



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

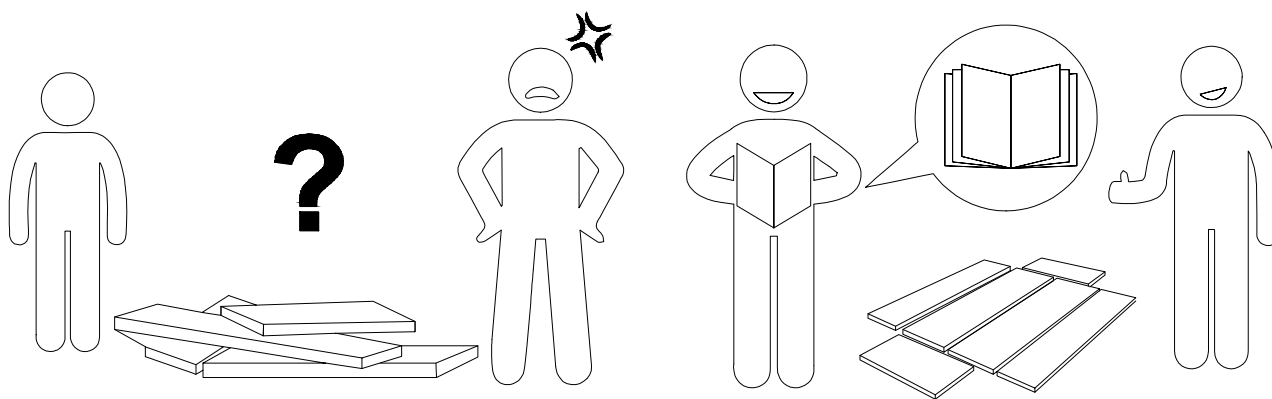

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

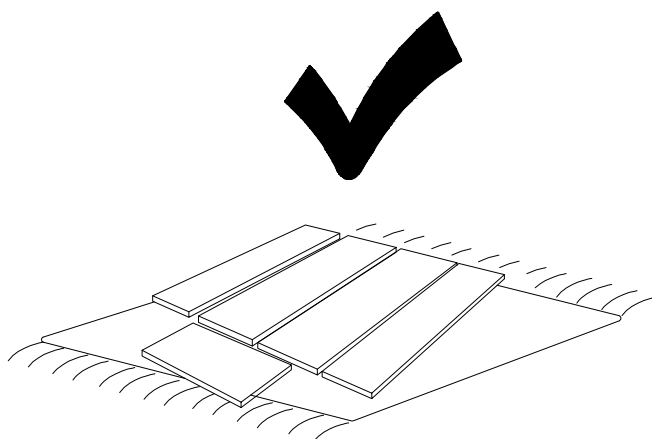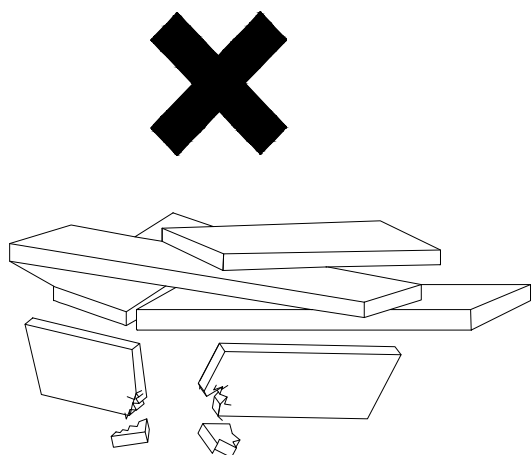













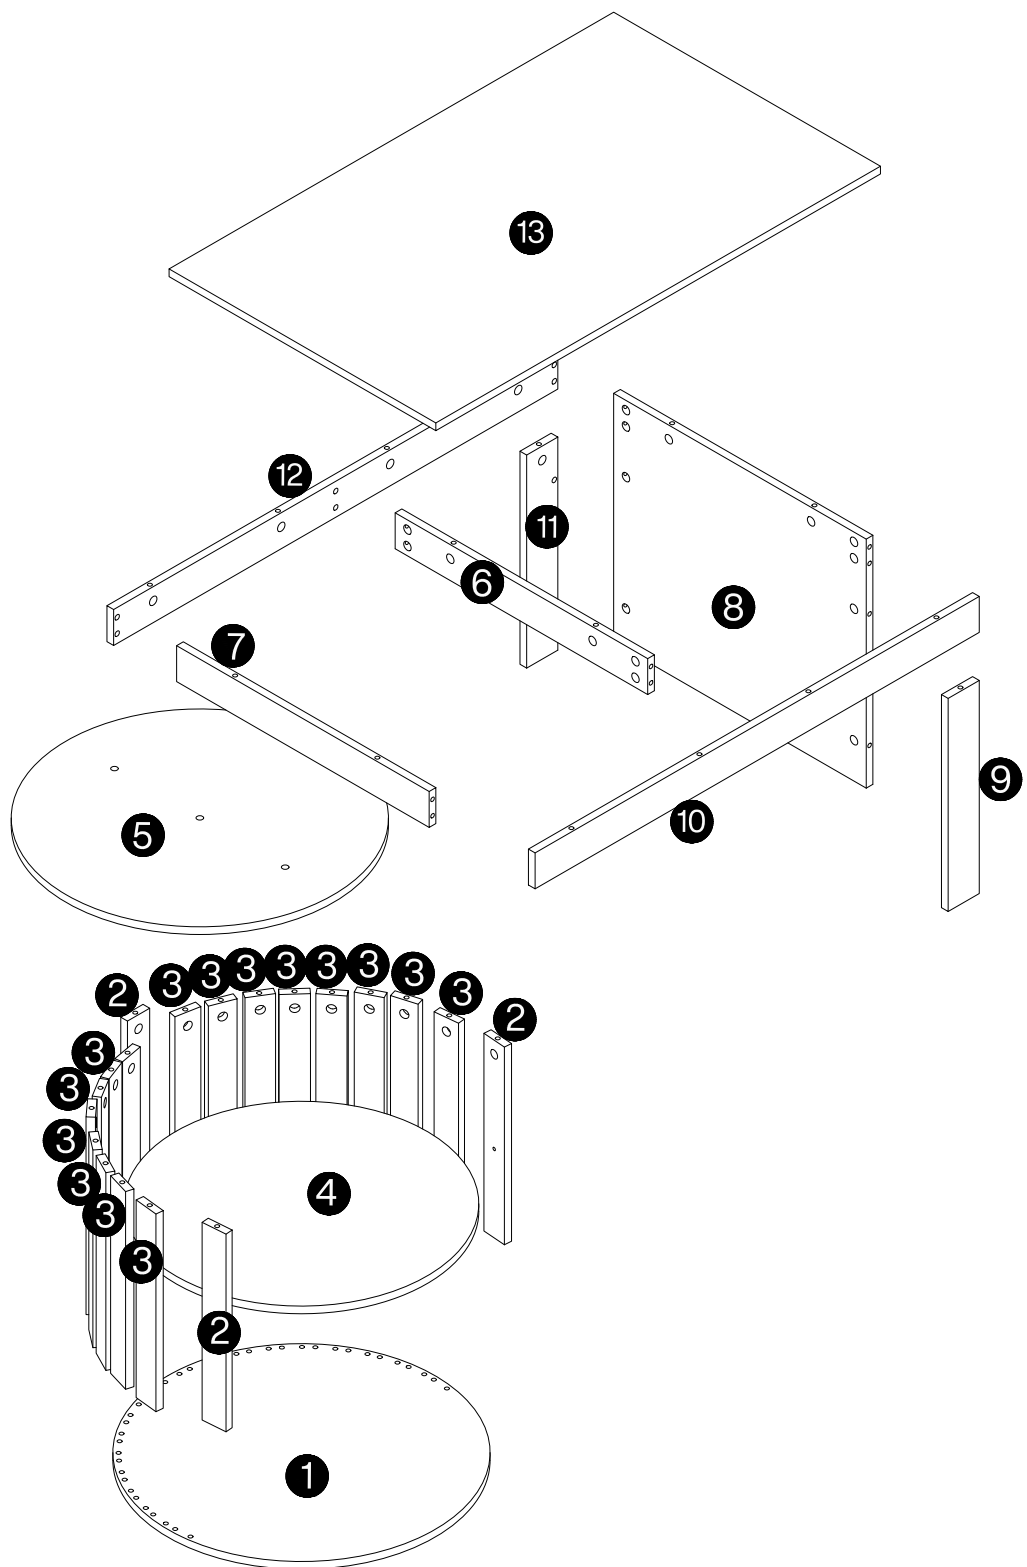


⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.








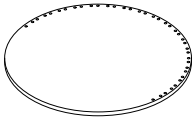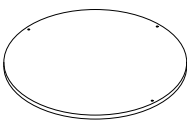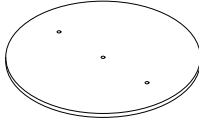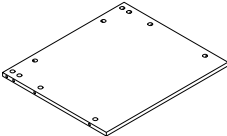

Parts List

<div>1</div> <div></div> <div>1pc</div>	<div>2</div> <div></div> <div>3 pcs</div>	<div>3</div> <div></div> <div>16 pcs</div>	<div>4</div> <div></div> <div>1 pc</div>	<div>5</div> <div></div> <div>1 pc</div>
<div>6</div> <div></div> <div>1 pc</div>	<div>7</div> <div></div> <div>1 pc</div>	<div>8</div> <div></div> <div>1 pc</div>	<div>9</div> <div></div> <div>1 pc</div>	<div>10</div> <div></div> <div>1 pc</div>
<div>11</div> <div></div> <div>1pc</div>	<div>12</div> <div></div> <div>1 pc</div>	<div>13</div> <div></div> <div>1 pc</div>		

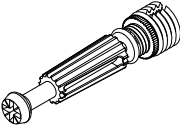


Hardware List

A	B	C	D	E	F
					
M6x40mm	Ø15x12mm	Ø3.5x14mm		M6x38mm	
51 pcs	51 pcs	6 pcs	3 pcs	41 pcs	8 pcs


G					
					
1 pc					

Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

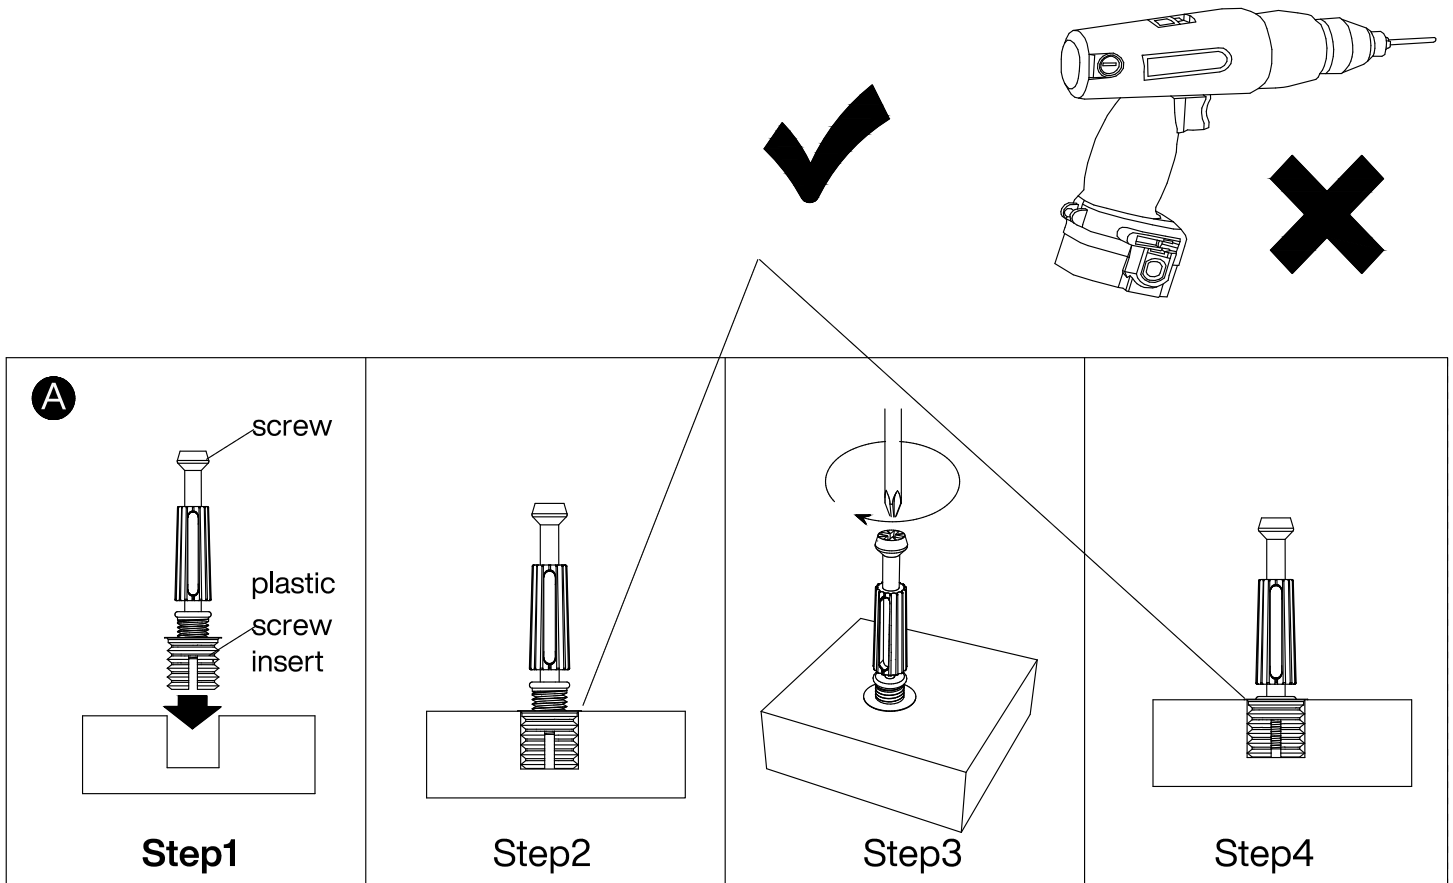


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

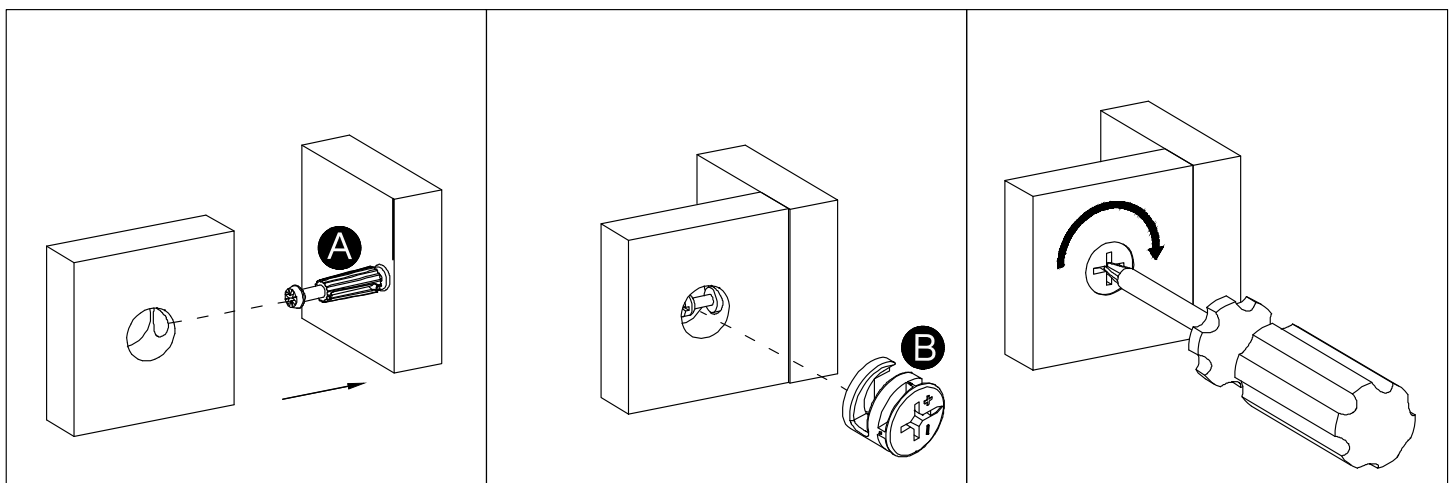





1

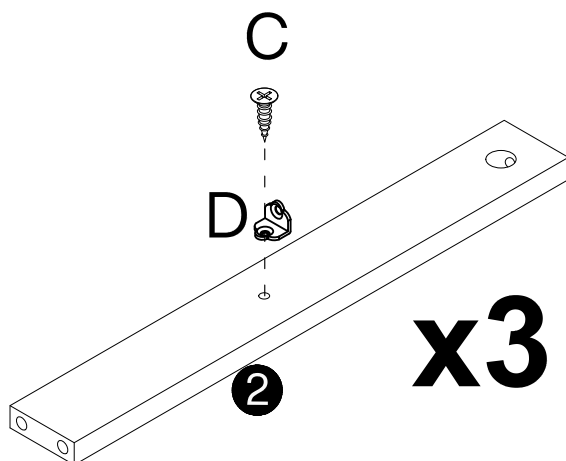



D	C
	 Ø3.5x14mm
3pcs	3pcs

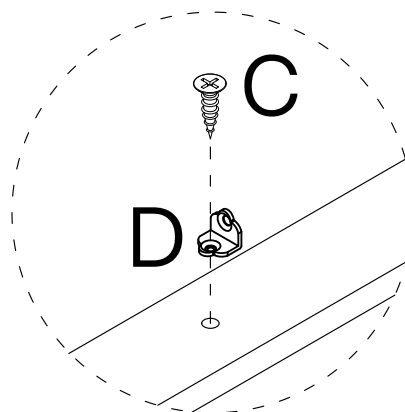

2

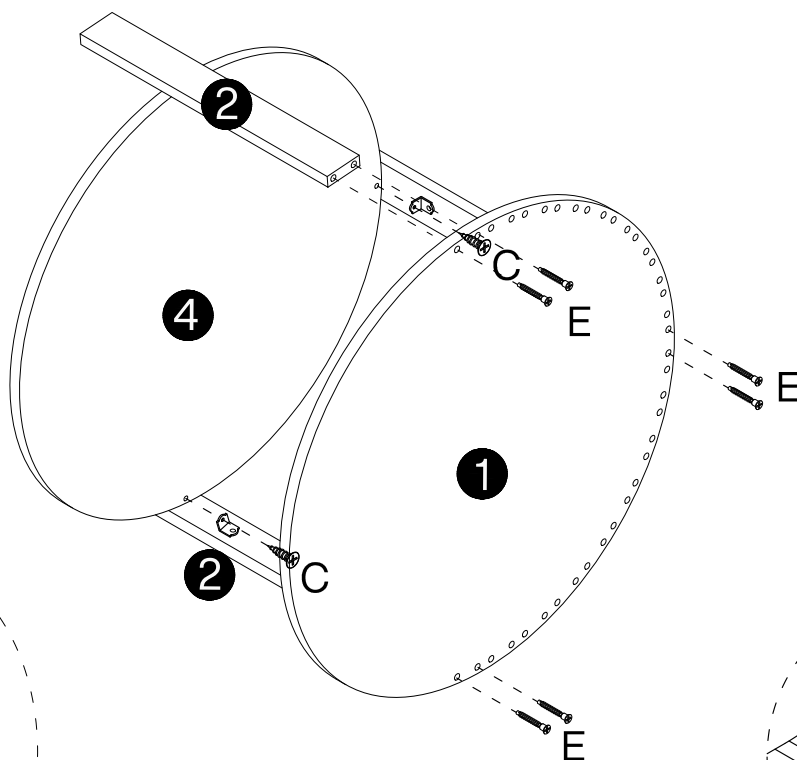



C	E
 Ø3.5x14mm	 M6x38mm
3pcs	6pcs

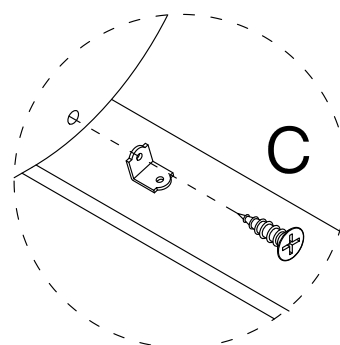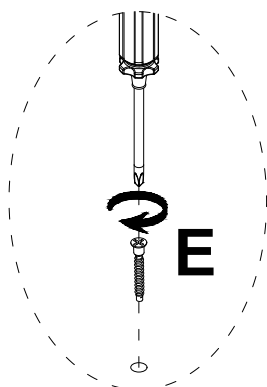





3

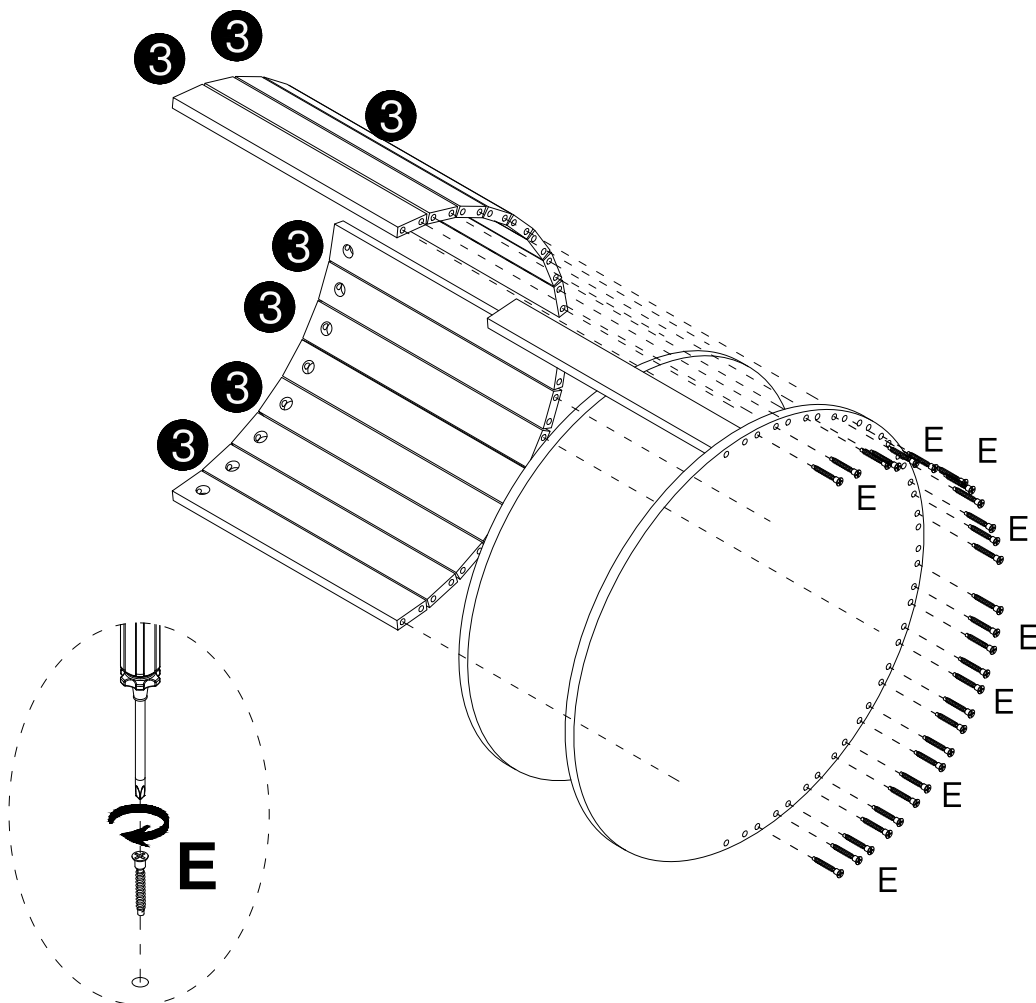


E

M6x38mm
32pcs

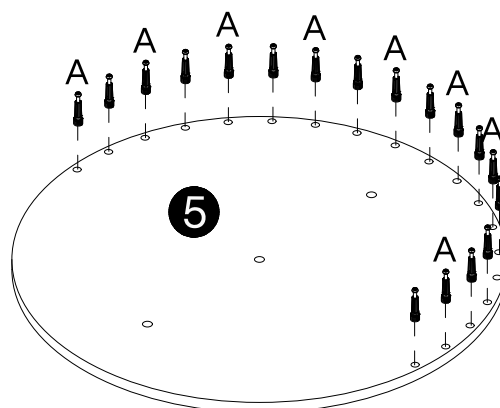4

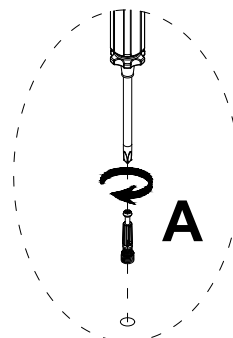



A

M6x40mm
19pcs




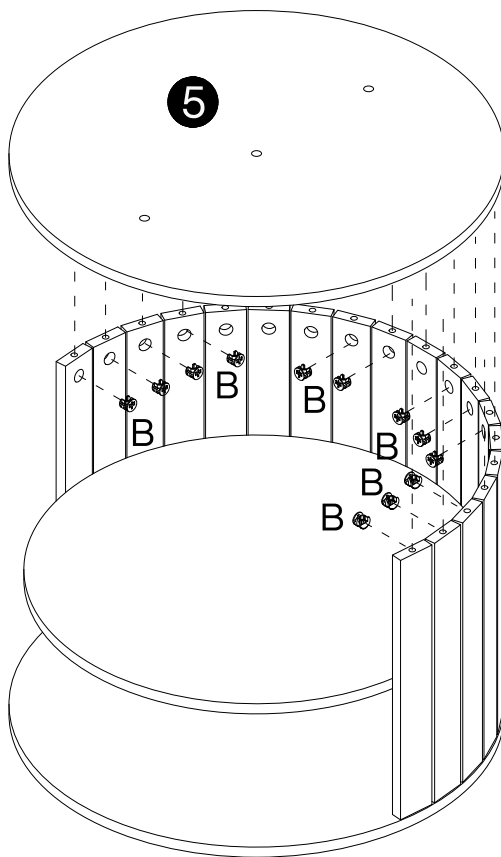


5




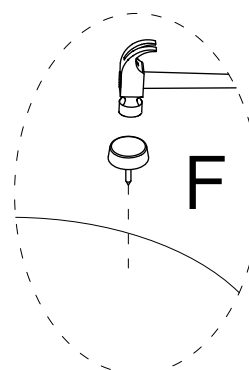
B

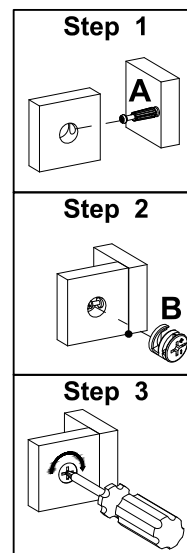19pcs

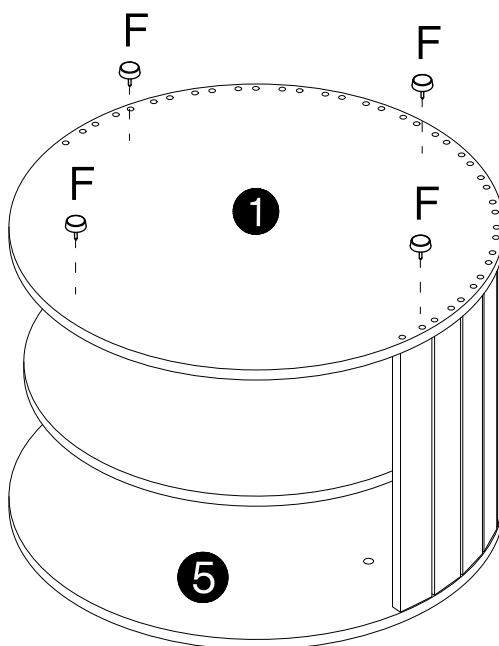

6




F

4pcs




 **Caution! Tap lightly**

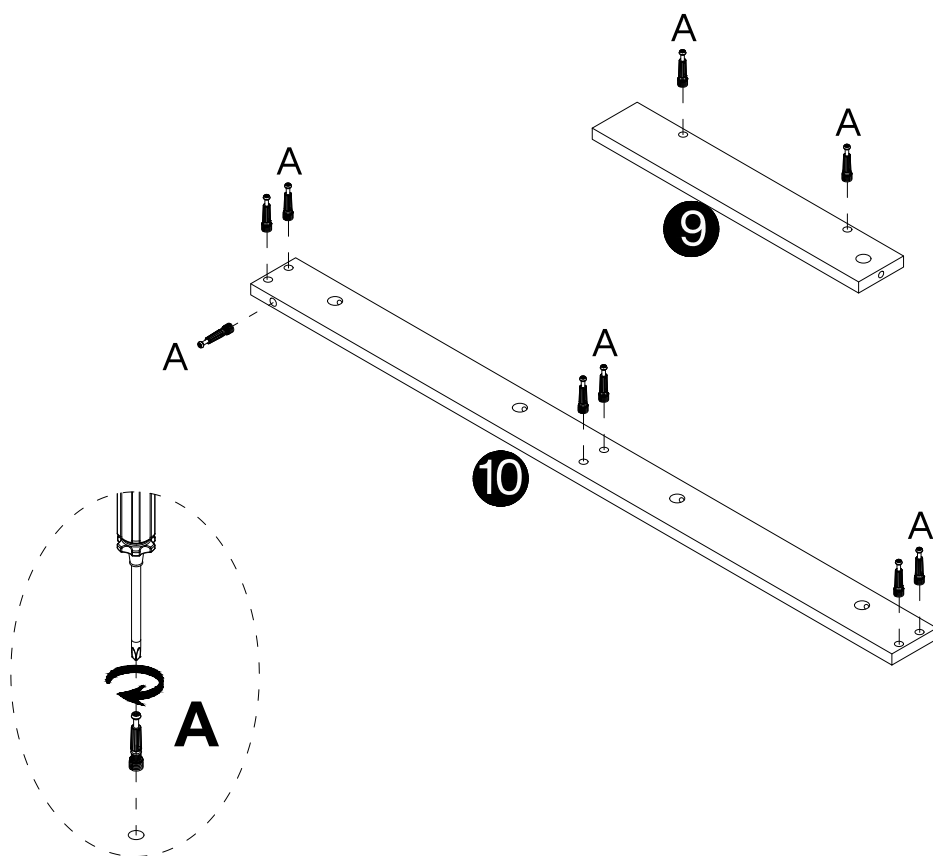



7



A

M6x40mm
9pcs

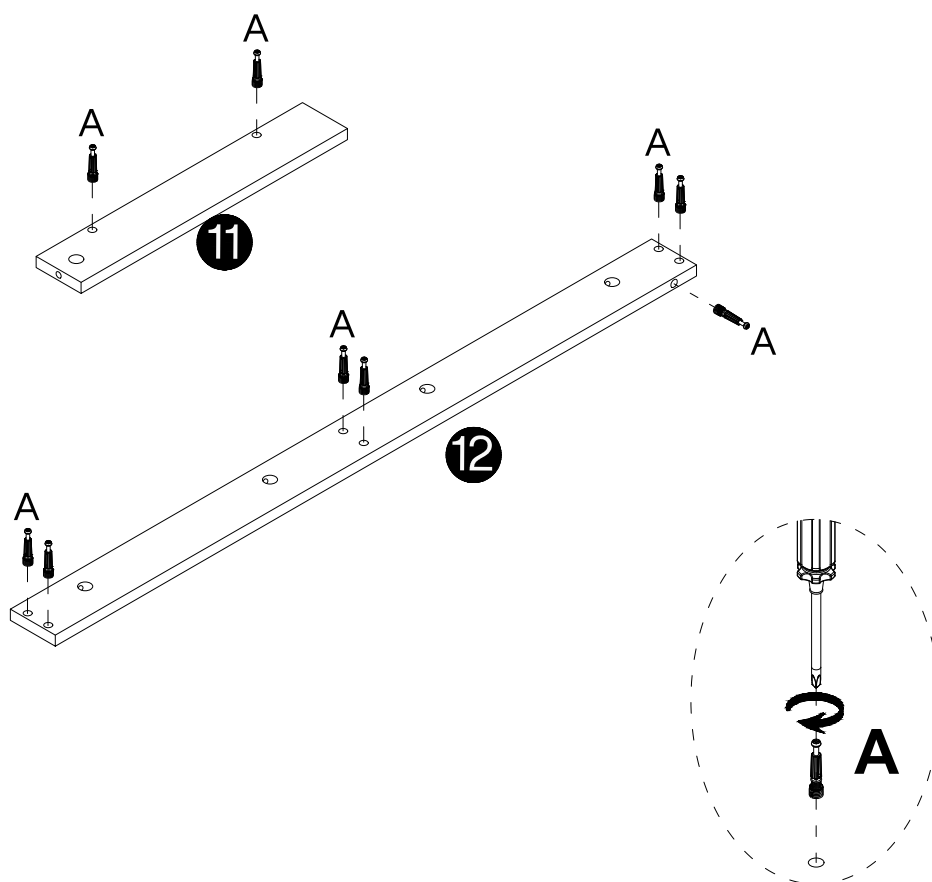
8




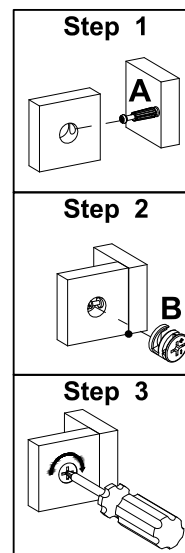
A

M6x40mm
9pcs

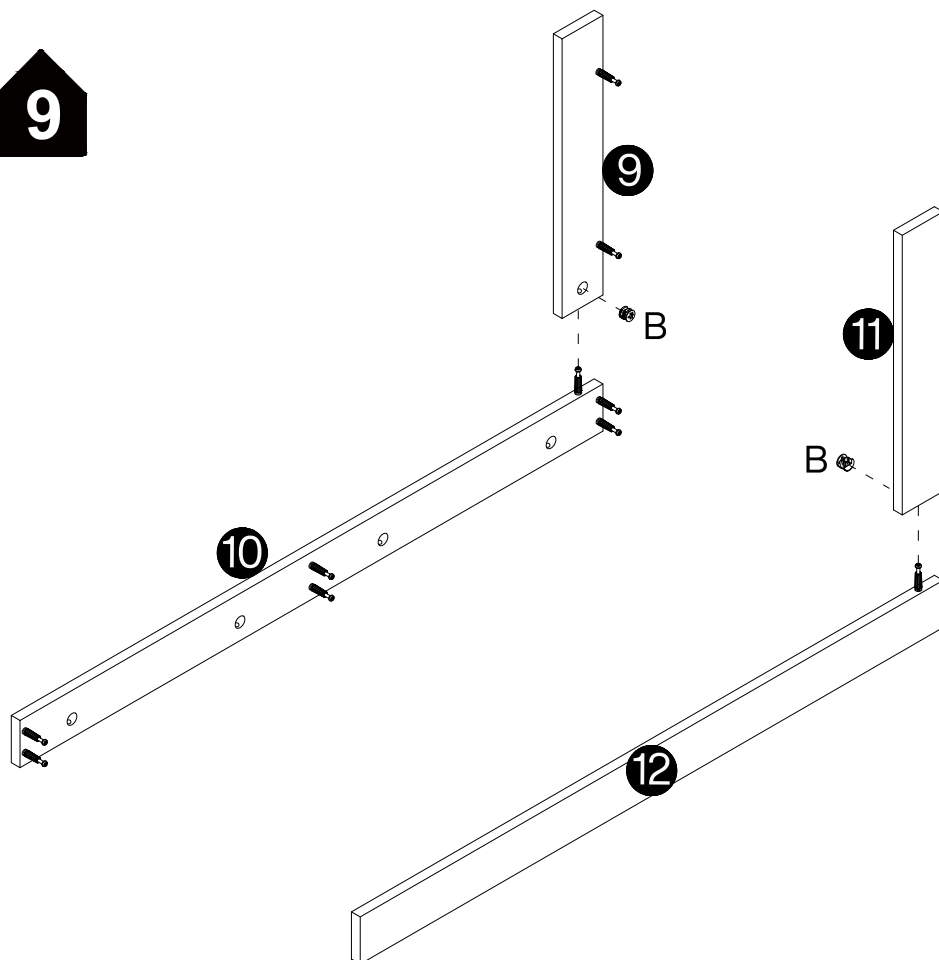


9




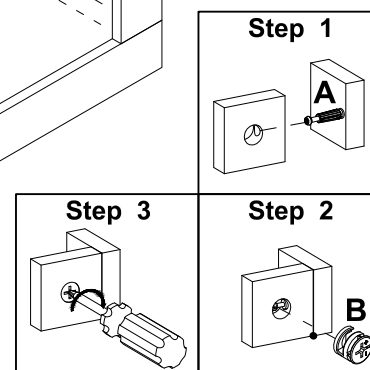
B

2pcs

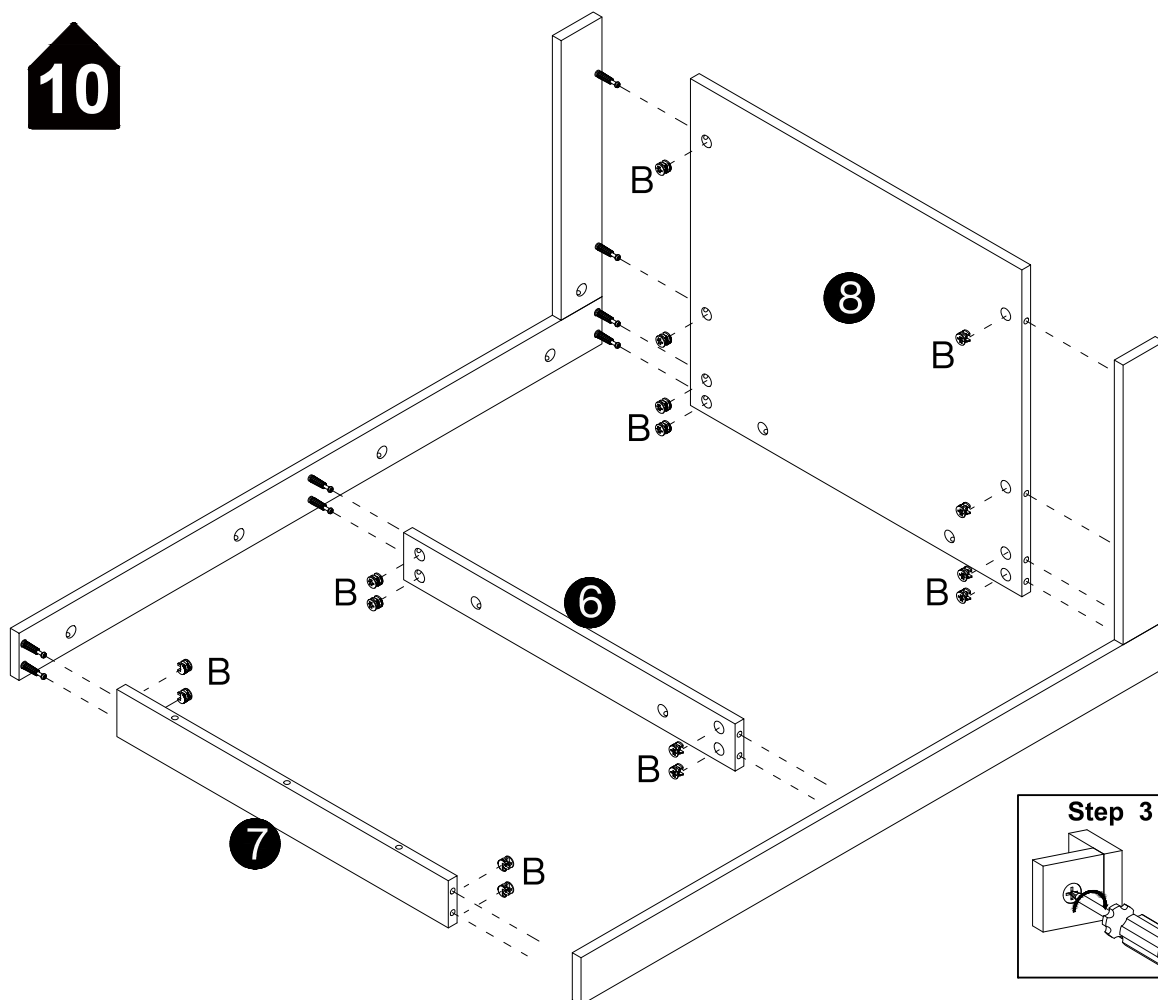

10





B

16pcs




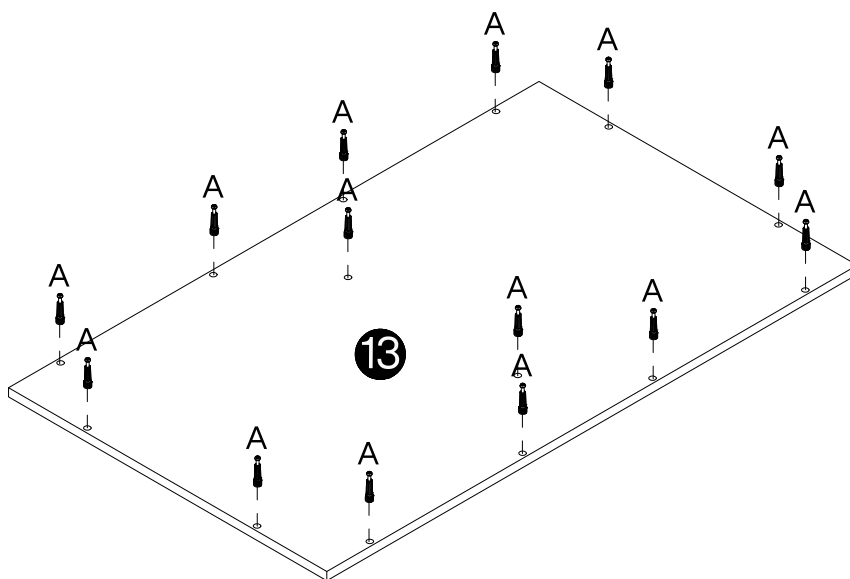


11




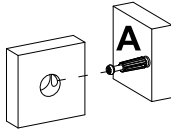
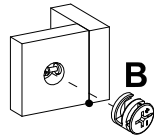
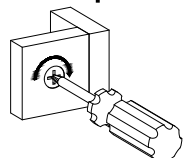
A

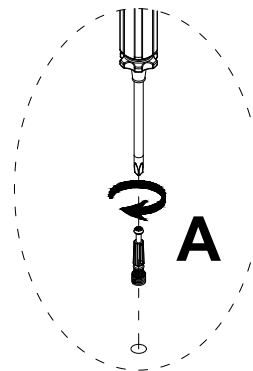M6x40mm
14pcs

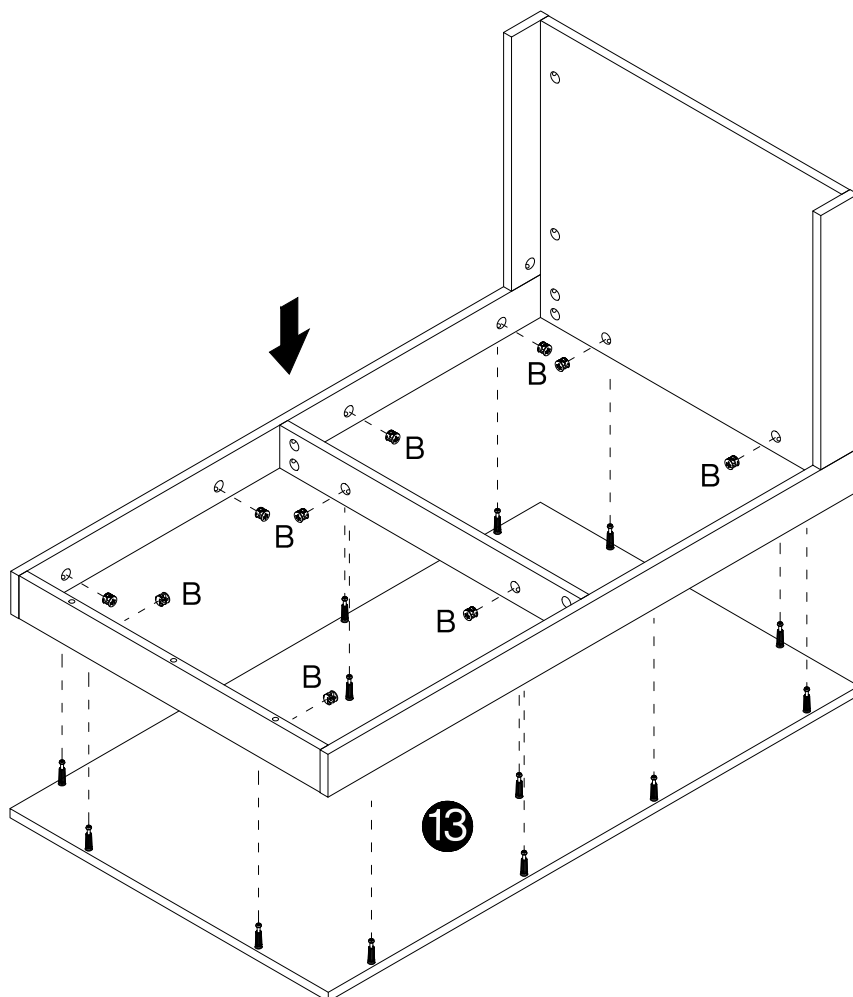

12





B

14pcs


Step 1

Step 2

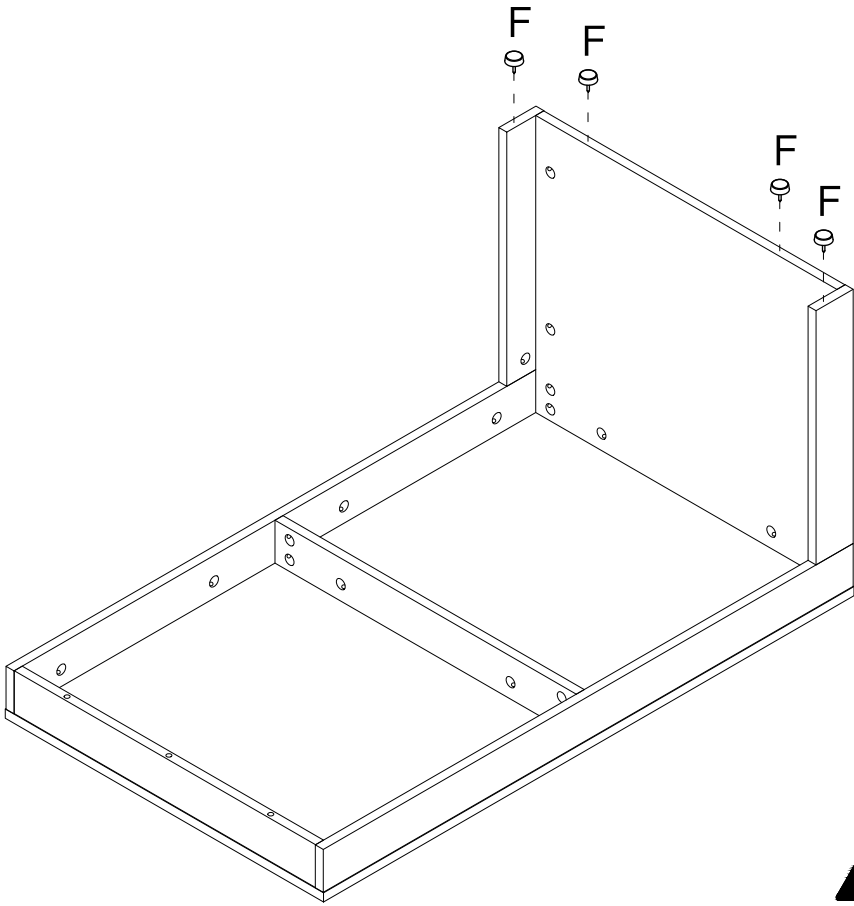Step 3




13

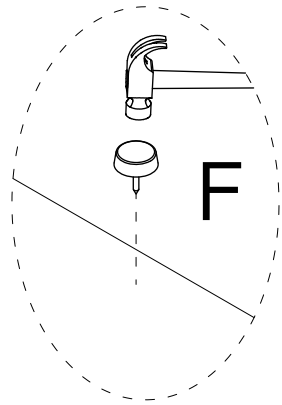



F

4pcs




! Caution! Tap lightly

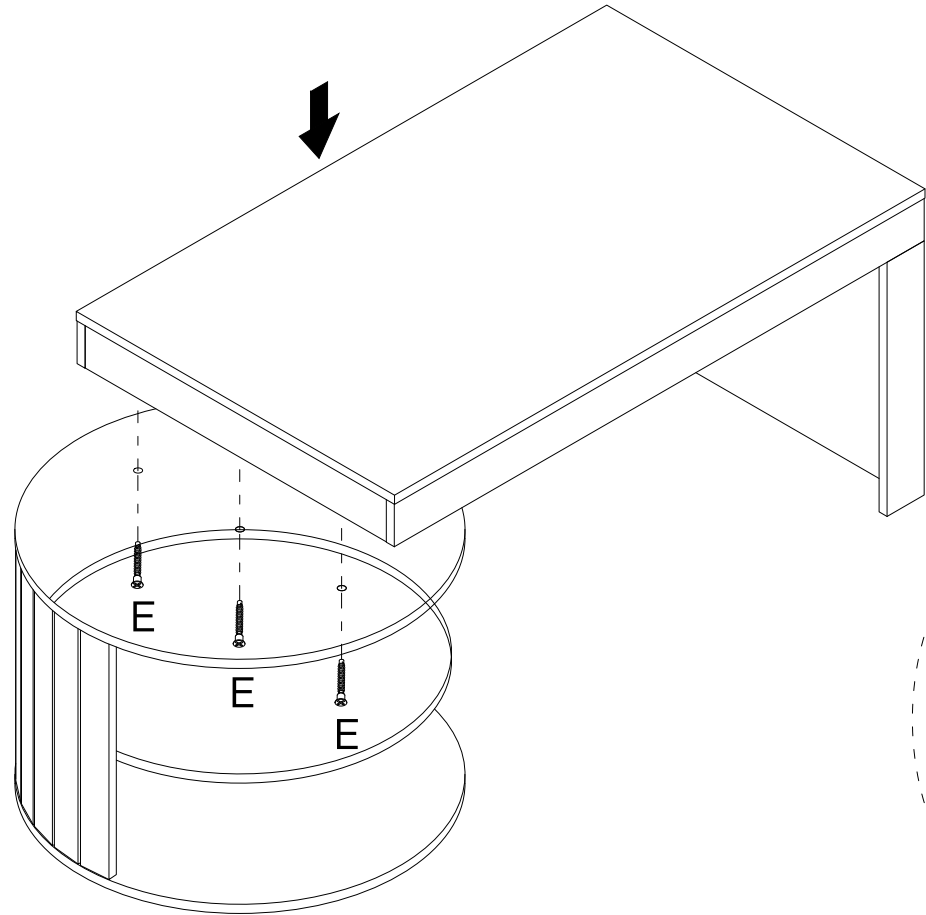14




E

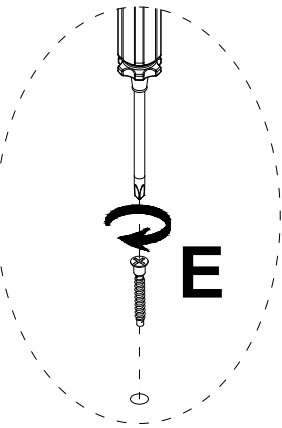M6x38mm
3pcs





DESIGNED FOR LIFE

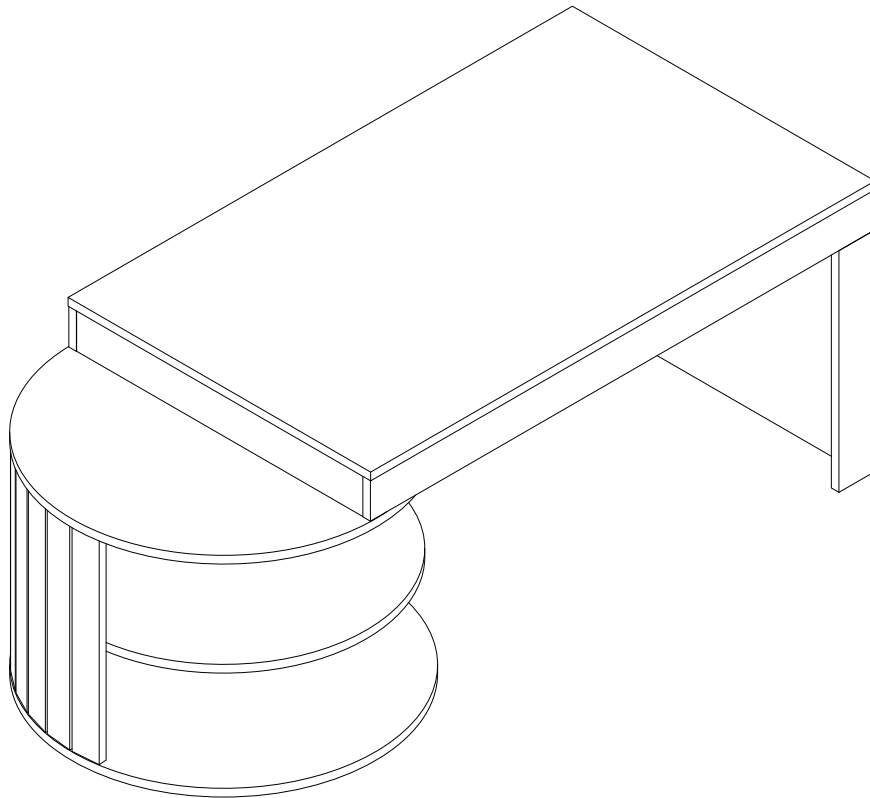Thank you for your support !



Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888

7 AM to 8 PM EST,
Monday to Friday

Follow Tribesigns



Facebook



Instagram




Pinterest



Twitter



YouTube

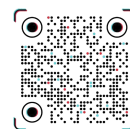

TikTok



WhatsApp