



Assembly Instructions



Wall Art

Contact Us

We're here to help you.

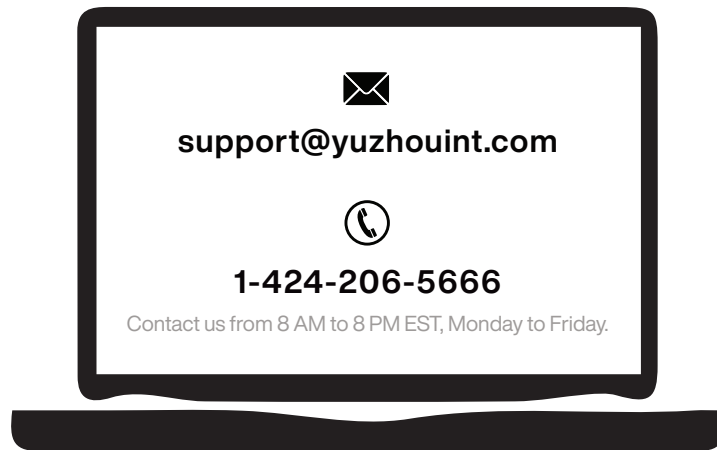

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. For multi-panel wall art, maintain a balanced spacing of 4–8 inches (10–20 cm) between panels to ensure a perfectly aligned visual effect.

Product Care




Regular Dusting

Gently remove dust from the surface of the painting using a soft brush or a clean microfiber cloth.




Cleaner Selection

If necessary, use deionized water or a specialized picture frame cleaner, avoiding cleaners that may damage the painting.

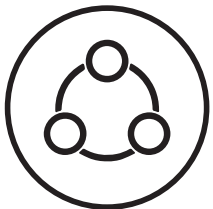

Cleaning Process


Lightly mist the surface with a spray bottle, then gently wipe with a soft cloth, avoiding harsh scrubbing to prevent damage.

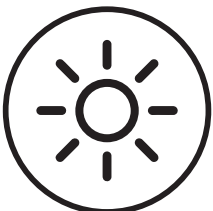







Drying

Ensure the painting is completely dry before returning it to its hanging position to prevent moisture damage to the image or backing.


Recommended Tools

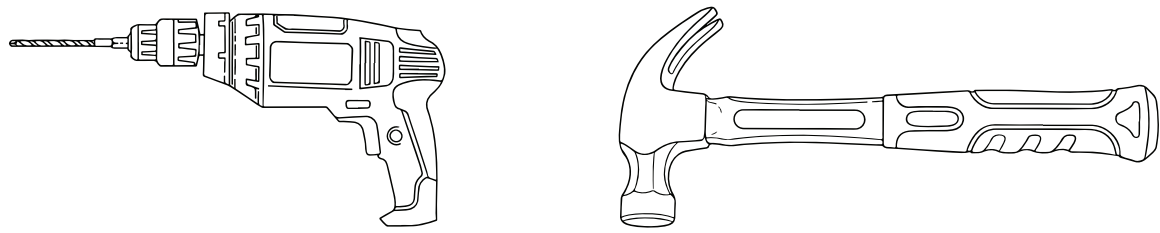

Included Parts

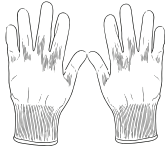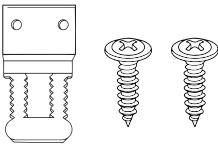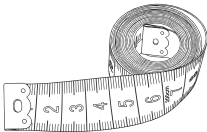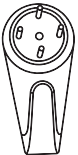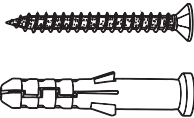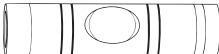Part Image	Description	1 Panel	2 Panel	3 Panel
1	Gloves	× 1	× 1	× 1
2	Frame Hanging Brackets + Screws	× 2	× 4	× 6
3	Pencil	× 1	× 1	× 1
4	Tape Measure	× 1	× 1	× 1
5	Large Non- Trace Nails	× 3	× 5	× 7
6	Expansion Anchors + Screws	× 3	× 5	× 7
7	Bubble Level	× 1	× 1	× 1

1


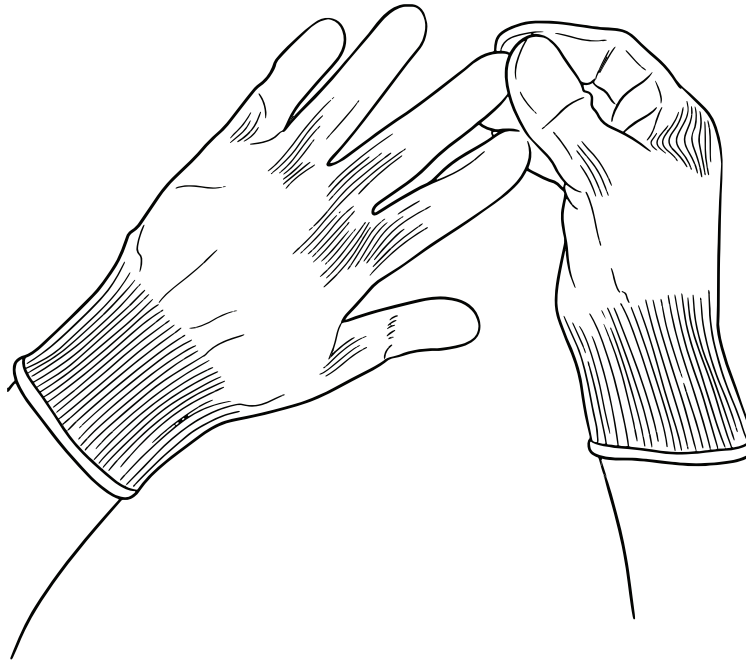


Step 1: Wear Gloves

Please wear the provided gloves (①) before installation to avoid leaving fingerprints, stains, or scratches on the surface of the artwork or frame.

Figure 2.1 - Diagram: Wearing Gloves

2

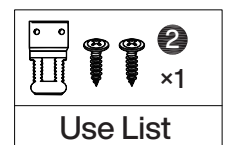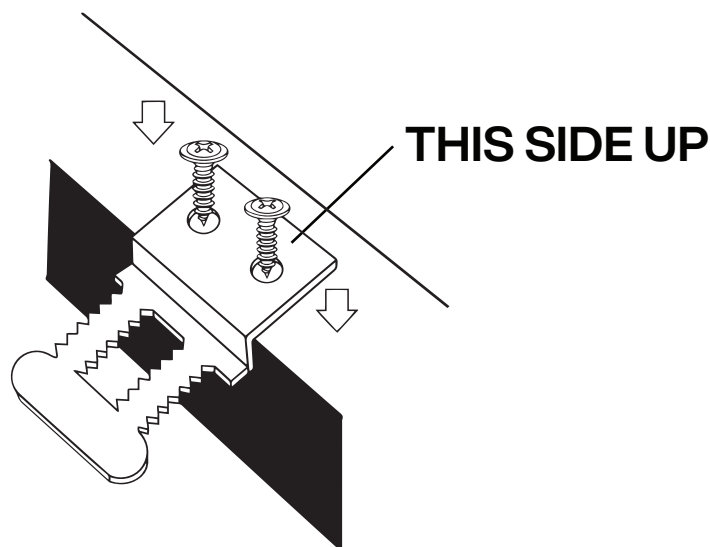

Step 2: Install the Back Hanging Hardware (Skip if pre-installed)


Check whether the hanging hooks are already installed on the back of the artwork.

If yes, please skip this step.

If no, take out the heavy-duty concealed brackets and screws (②). Align the bracket with the pre-drilled holes on the back of the frame, then secure and tighten it with the screws.

Figure 2.2 - Diagram: Installing the Concealed Bracket (Note: Ensure the narrow opening faces upward)

3

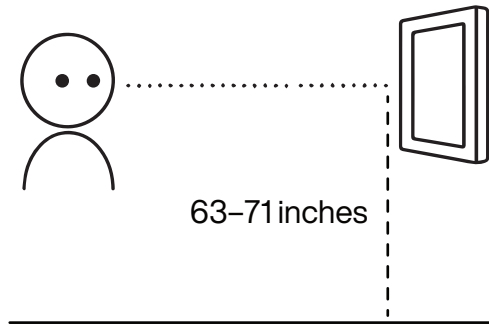


Step 3: Determine the Hanging Height

It is recommended that the center of the artwork be at or slightly above eye level. Generally, the recommended height from the floor to the center of the painting is approximately 160–180 cm (approx. 63–71 inches). You may adjust this based on your furniture height and space layout.


Figure 2.3 - Diagram: Eye Level Alignment

4

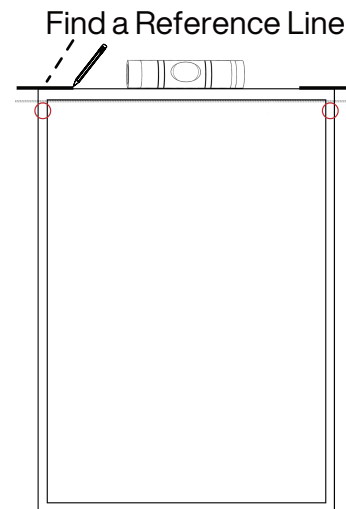


Step 4: Horizontal Positioning

Preview the height and adjust for level. Find a good reference line, then draw a crosshair at the hook hole spacing.

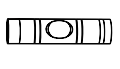	③ x1
	⑦ x1
Use List	

5

Measure the Hole Spacing

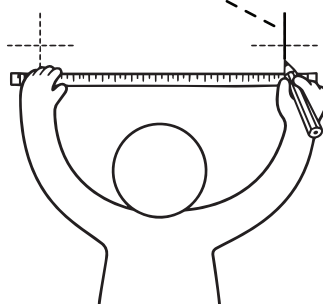

	③ x1
	④ x1
Use List	

Step 5: Mark the Installation Position

Use a pencil (③) and a measuring tape (④) to measure and mark the hanging position. It is highly recommended to use a "cross mark" (x or +) for precise positioning.

For multi-panel wall art, it is recommended to maintain a spacing of 10–20 cm (approx. 4–8 inches) between panels to achieve a more balanced and harmonious visual effect.

Figure 2.4 - Diagram: Making Cross Marks

Step 6: Choose the Appropriate Mounting Method (Select one of the following options)

Option 1: Non-Trace Nails (⑤)


Option 2: Expansion Wall Anchors & Screws (⑥)

Note: An electric drill is required to pre-drill holes before installing expansion anchors.

*Recommended Nails for Different Wall Types

Wall Type	Recommended Mounting Method
Drywall	Screws 
Painted Wall	Large No-Trace Nails 
Wood Wall / Wooden Door	Large No-Trace Nails or Screws  
Cement Wall / Concrete Wall	Wall Anchors & Screws Recommended  
Concrete Wall	Wall Anchors & Screws  
Brick Wall	Wall Anchors & Screws  
Tile Wall	Wall Anchors & Screws  
Plaster Wall	Wall Anchors & Screws Recommended for Better Stability  

Step 7: Install Hardware and Hang the Artwork

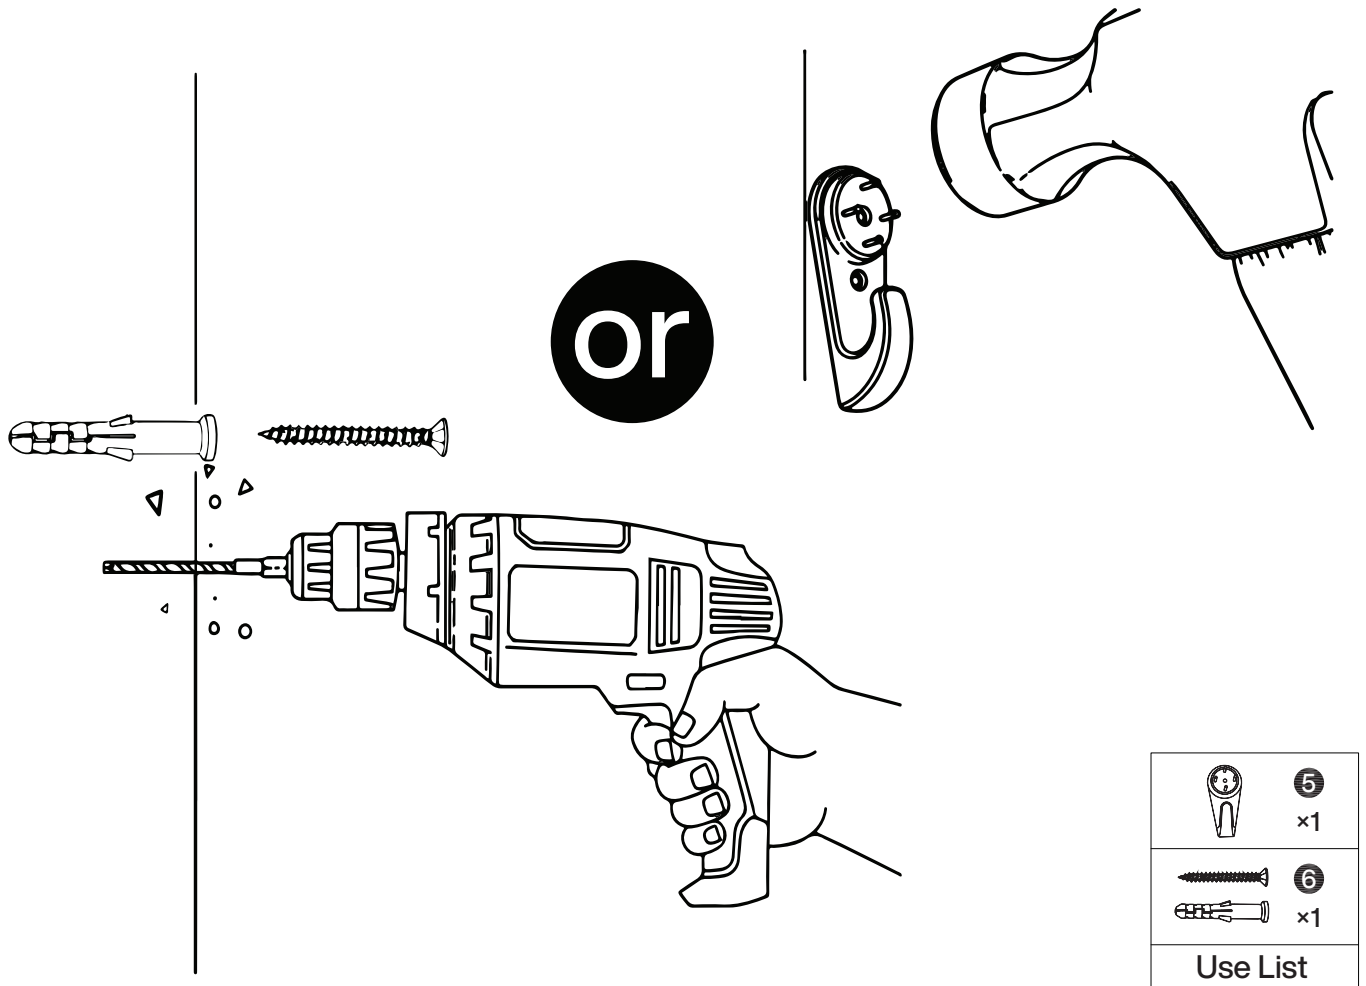


Method 1: Using Non-Trace Nails (⑤)

Gently hammer the non-trace nail into the wall at the marked position, then hang the artwork onto the nail hook.

Method 2: Using Expansion Wall Anchors & Screws (⑥)

First, use an electric drill to drill a hole at the marked position. Next, insert the plastic expansion anchor into the hole, and then drive the screw into the anchor until secure. Finally, hang the artwork onto the screw hook.

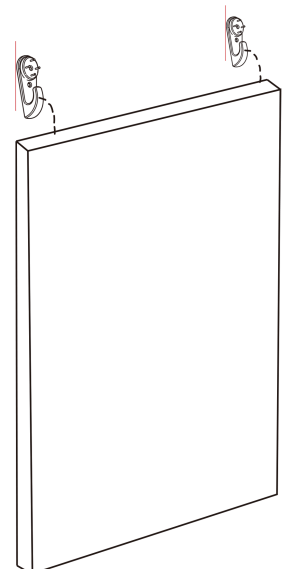

Thank you for your support!

