


Assembly Instructions

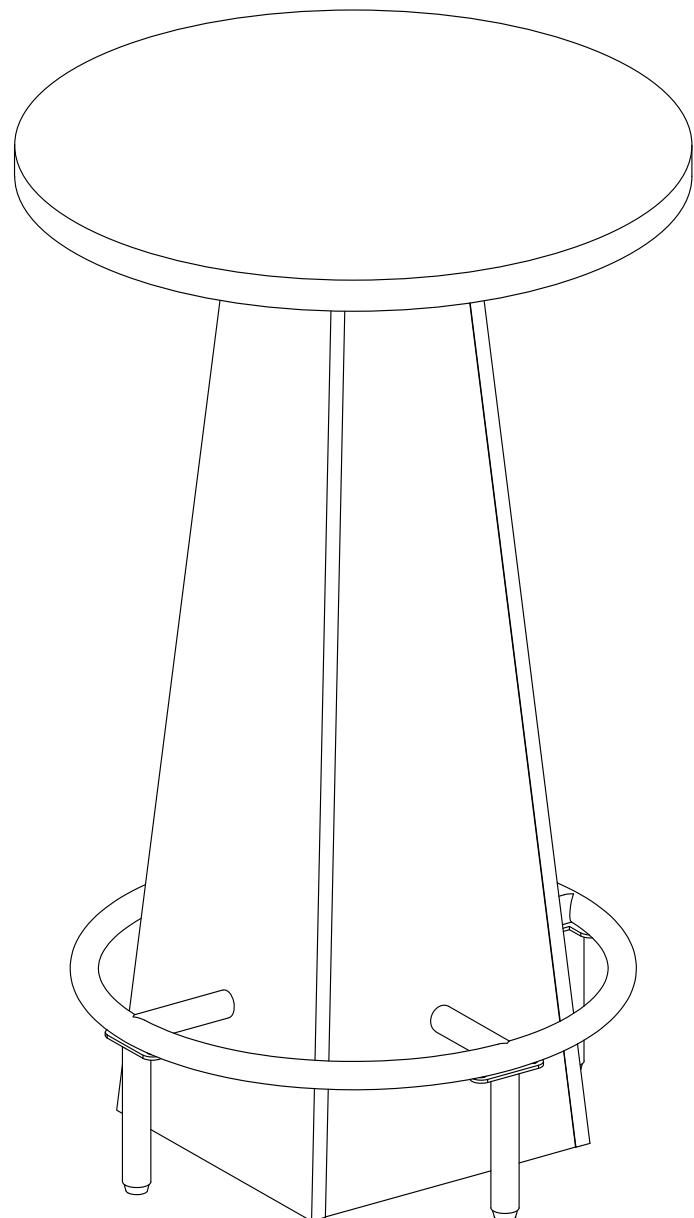


Bar Table

Model No.
HOGA-RY0316
HOGA-RY0322

Contact Us




We're here to help you.

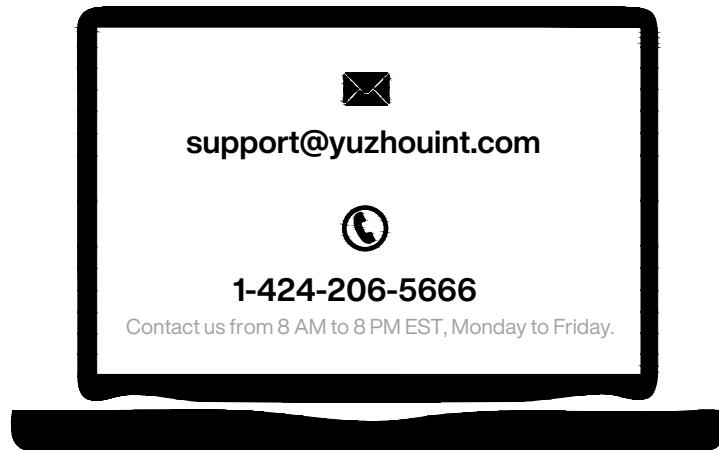

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

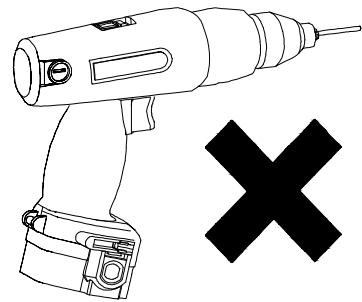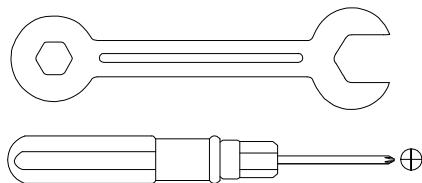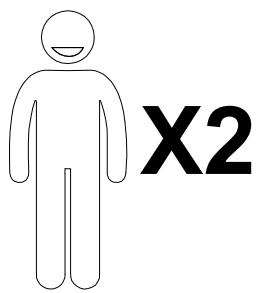




We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

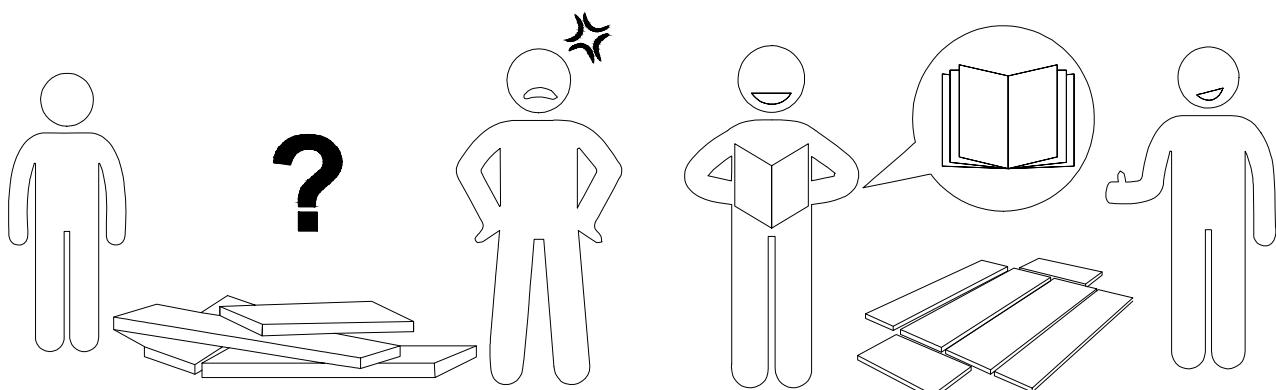

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.



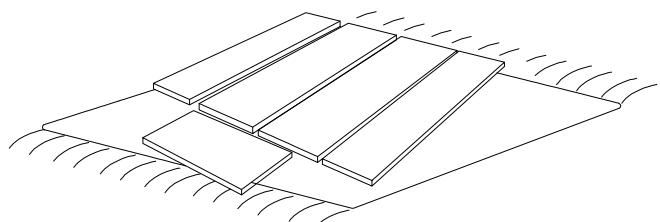
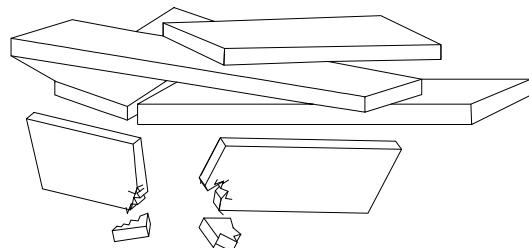
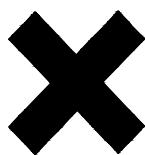


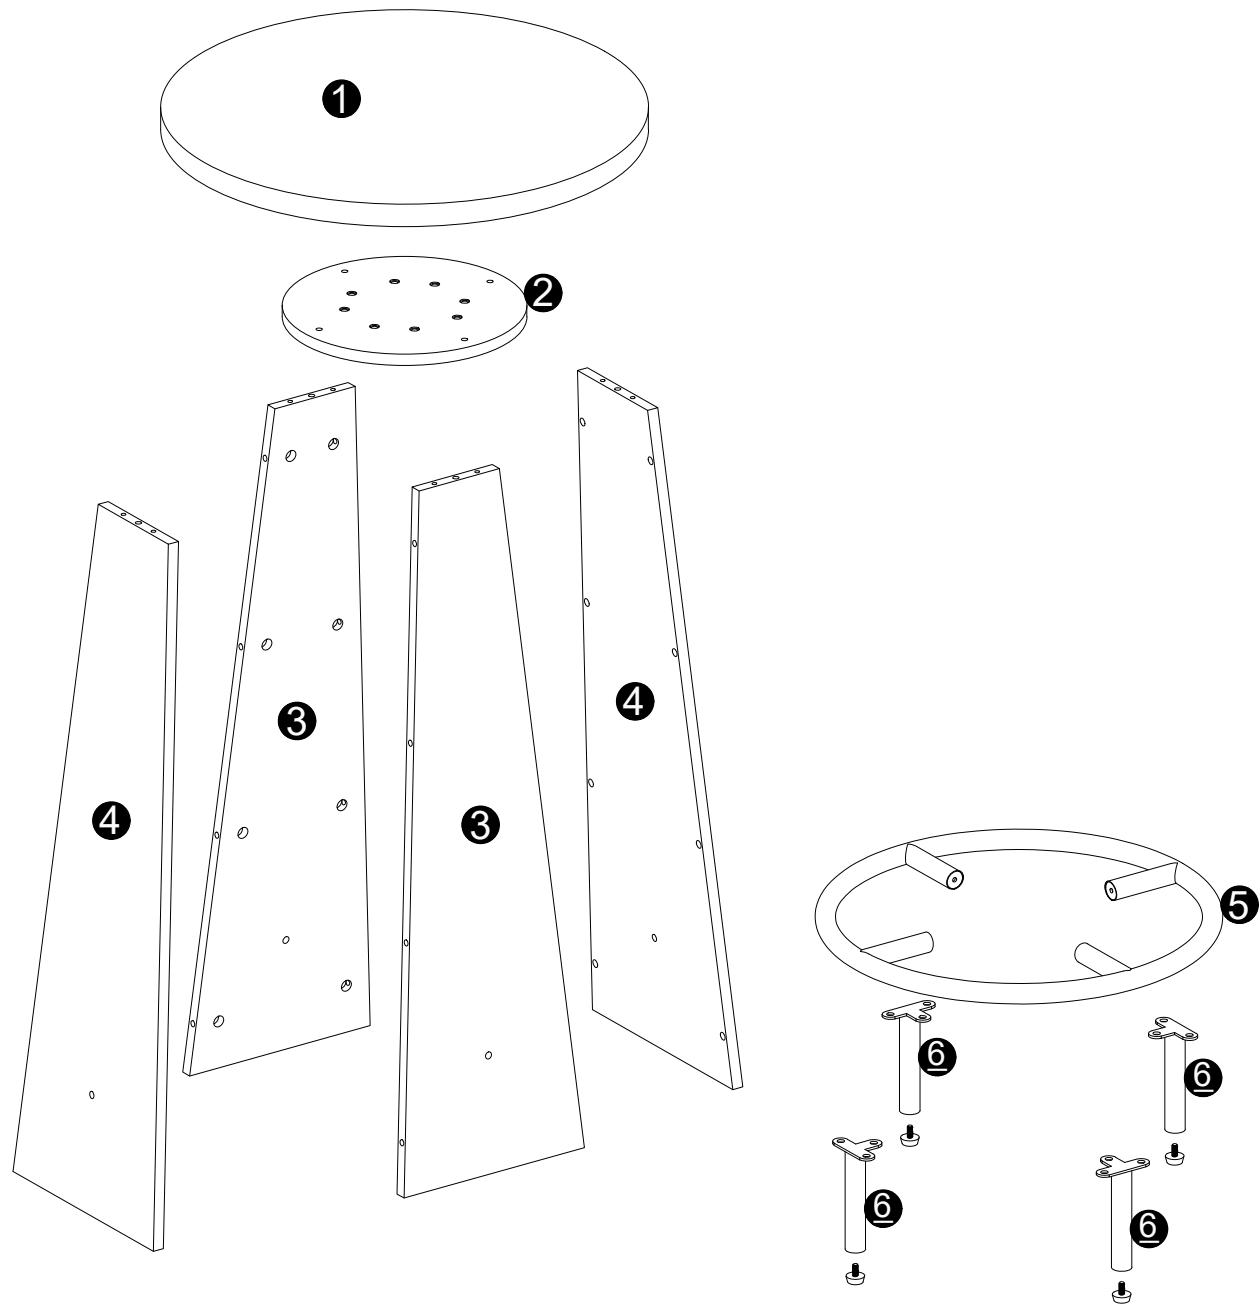


⚠ Caution


Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.




Parts List

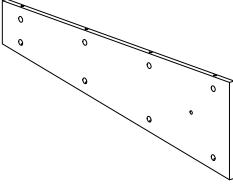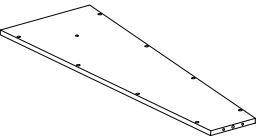1 	2 	3 	4 	5 
1 pc	1 pc	2 pcs	2 pcs	1 pc

6 	
4 pcs	


Hardware List

A	B	C	D	E	F
					
$\varnothing 6 \times 40\text{mm}$	$\varnothing 15 \times 12\text{mm}$	$\varnothing 8 \times 30\text{mm}$	$\varnothing 7 \times 38\text{mm}$	$M6 \times 12\text{mm}$	$M6 \times 25\text{mm}$
17 pcs	17 pcs	5 pcs	9 pcs	13 pcs	5 pcs


G	H	I	J
			
$M6 \times 30\text{mm}$	$M4 \times 65\text{mm}$	$M6 \times \varnothing 23\text{mm}$	
5 pcs	1 pc	4 pcs	1 pc


Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

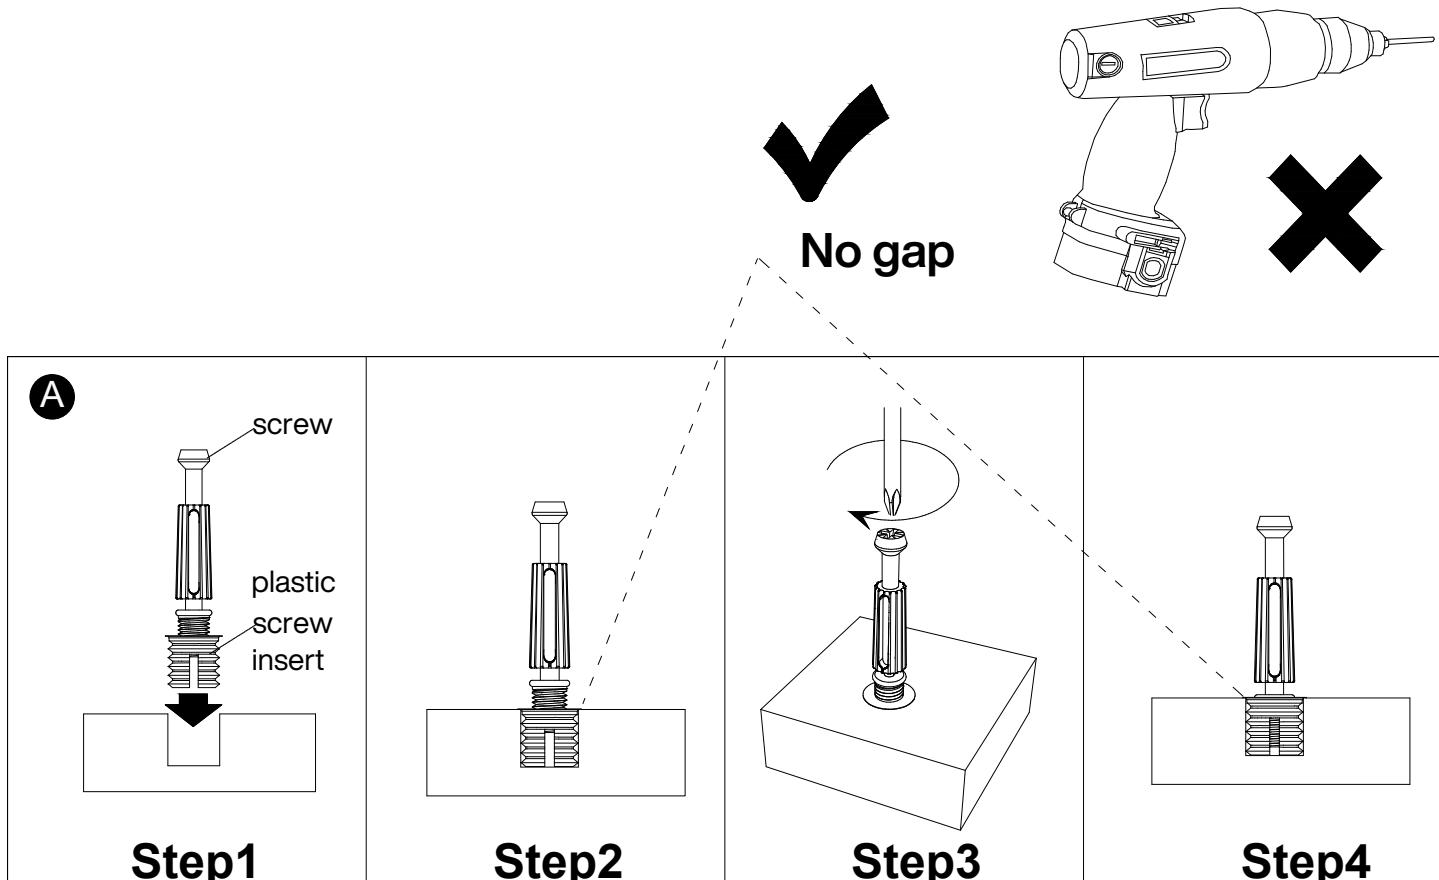


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

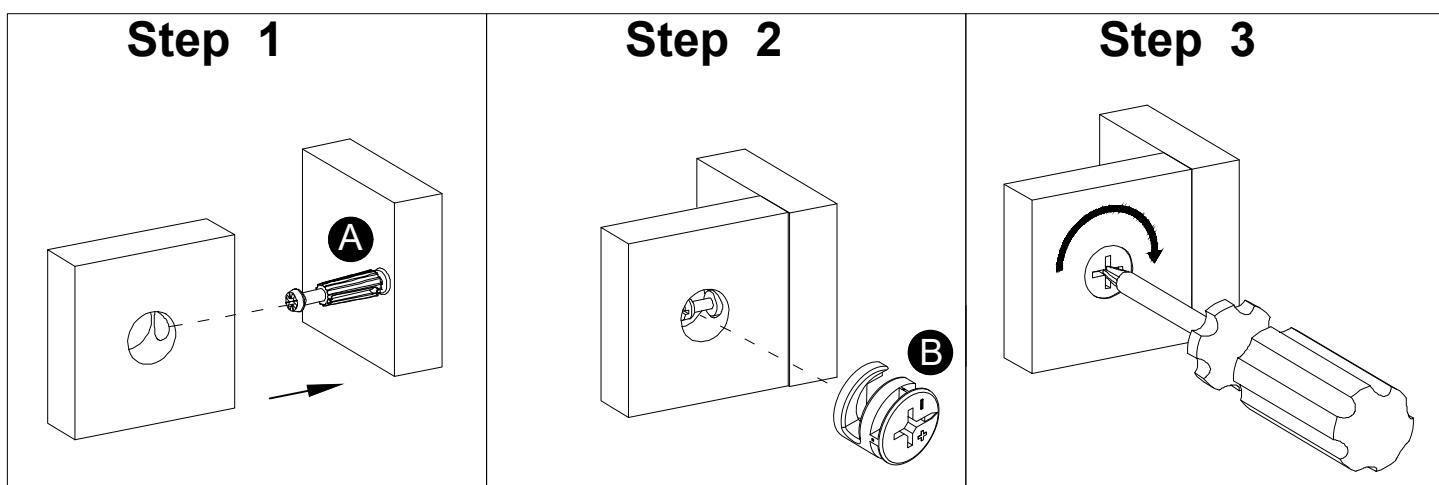


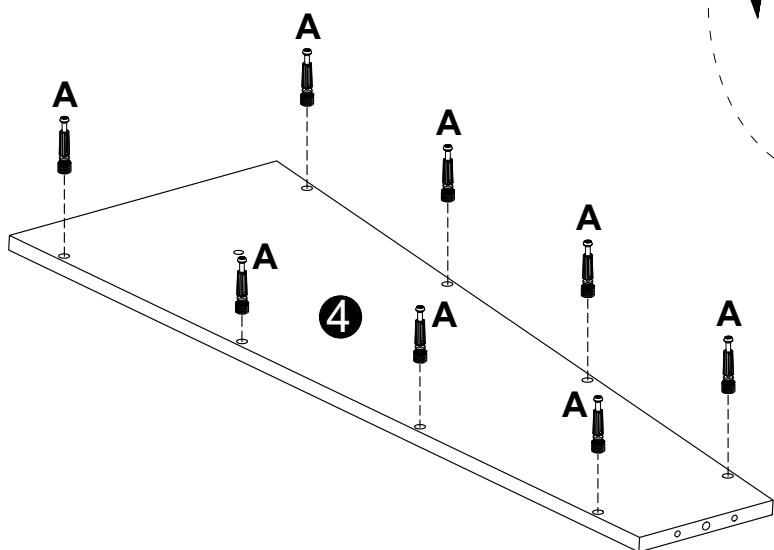
1

A
Ø6x40mm 16 pcs


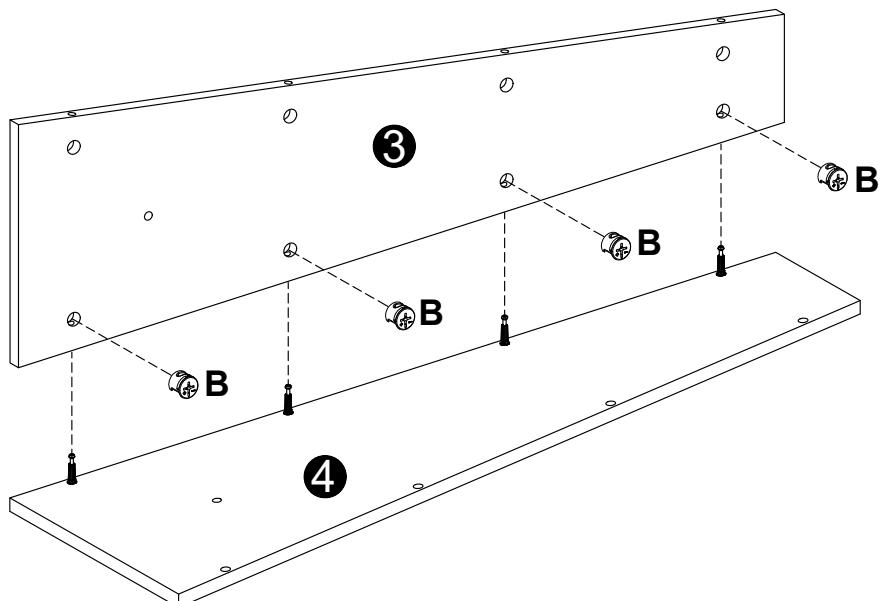
x2**2**

B	J
Ø15x12mm 4 pcs	1 pc

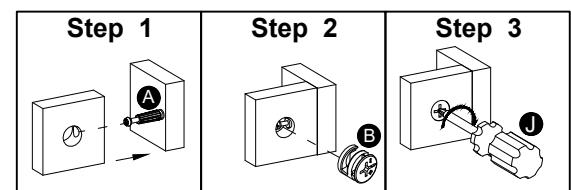


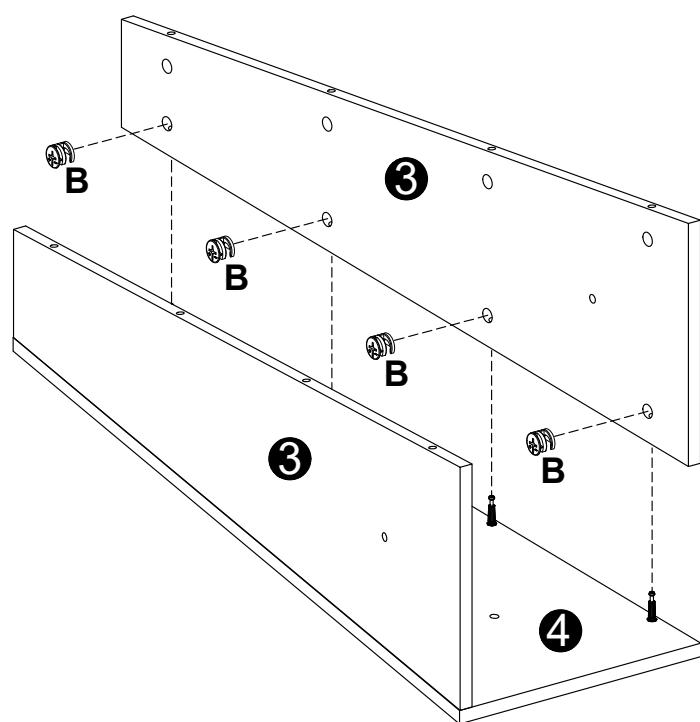3


B
Ø15x12mm
4 pcs

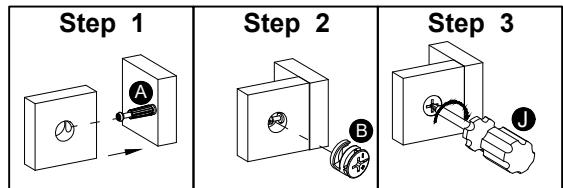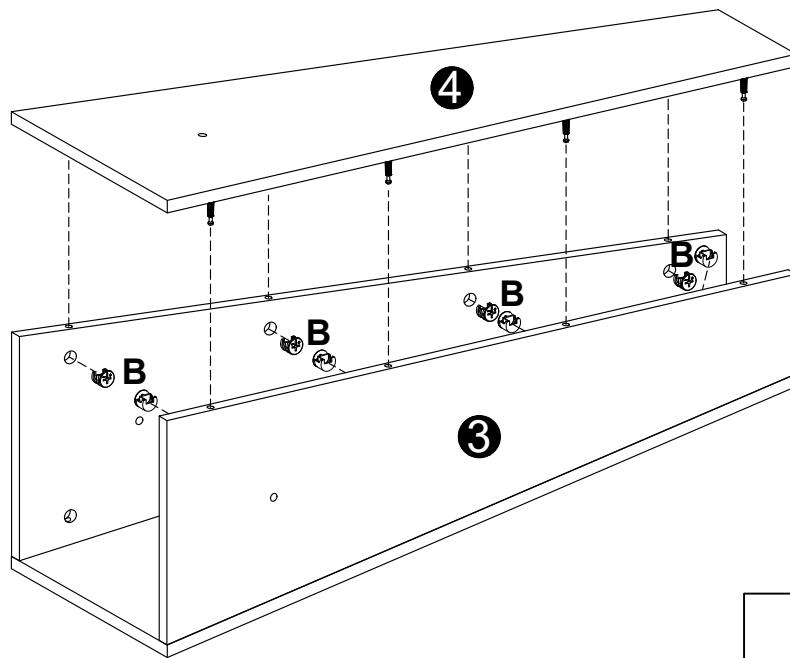**4**


B
Ø15x12mm
8 pcs

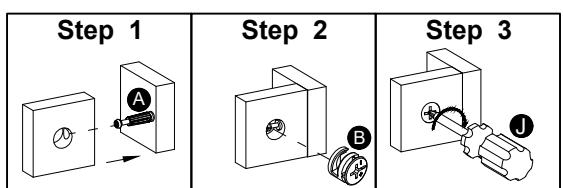

5

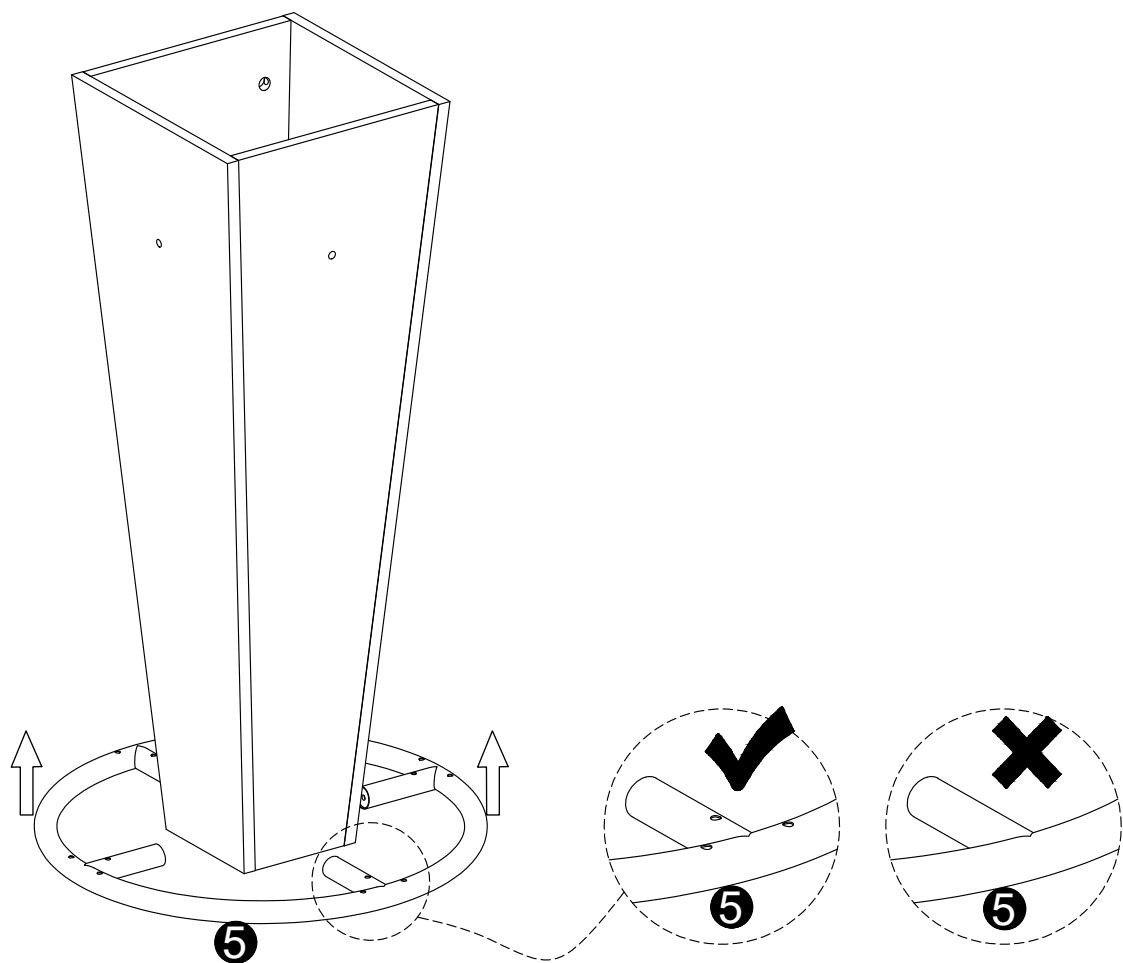


6

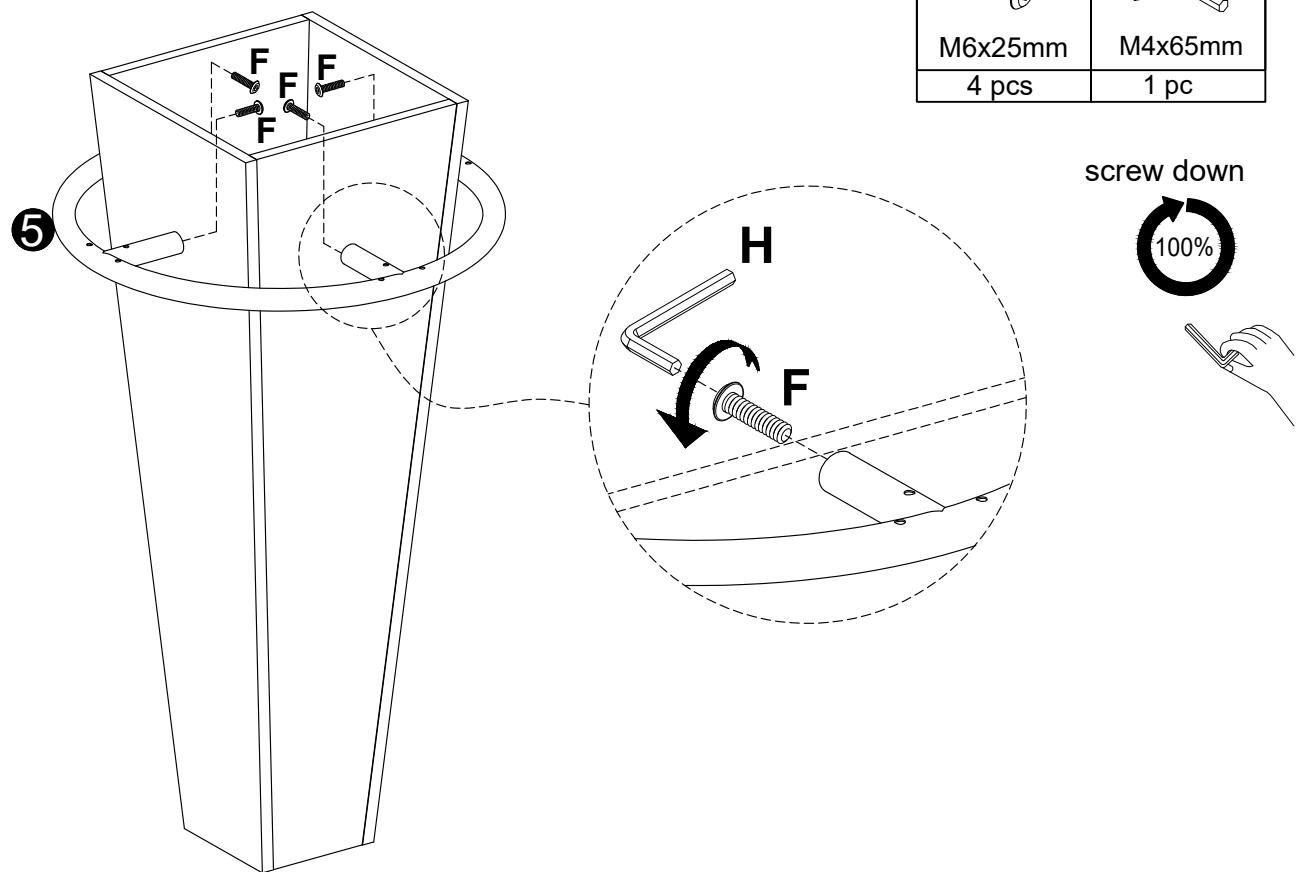


F	H
M6x25mm 4 pcs	M4x65mm 1 pc

7

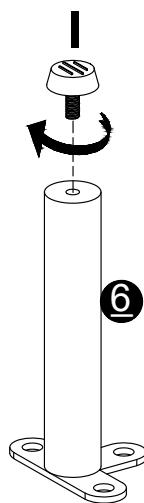

x4



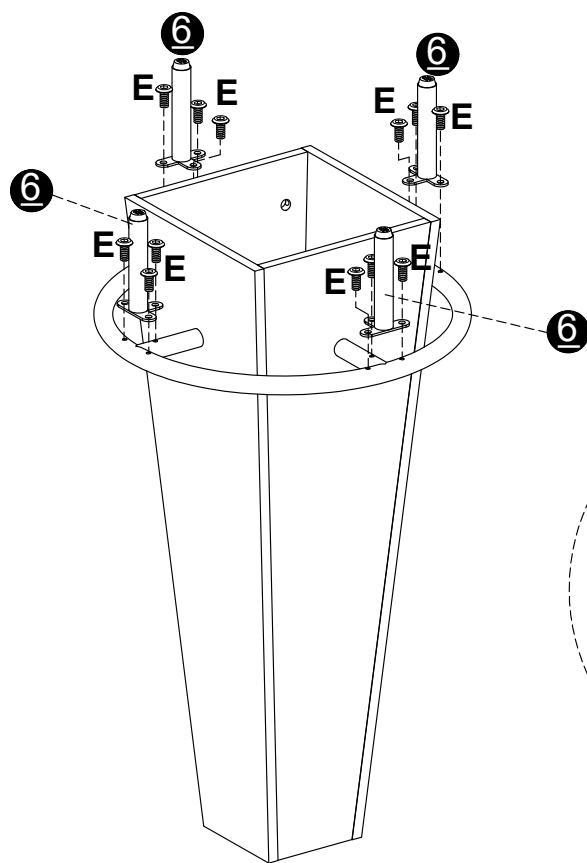


E	I
 M6x12mm 12 pcs	 M6xØ23mm 4 pcs


screw down




8

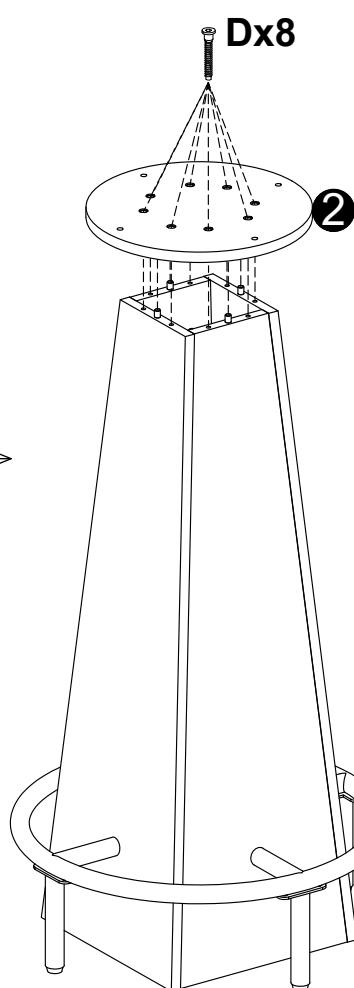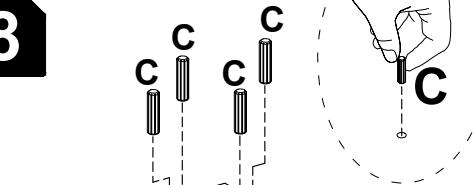


C	D
 Ø8x30mm 4 pcs	 Ø7x38mm 8 pcs

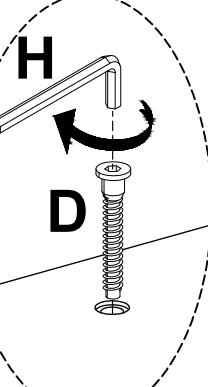

9

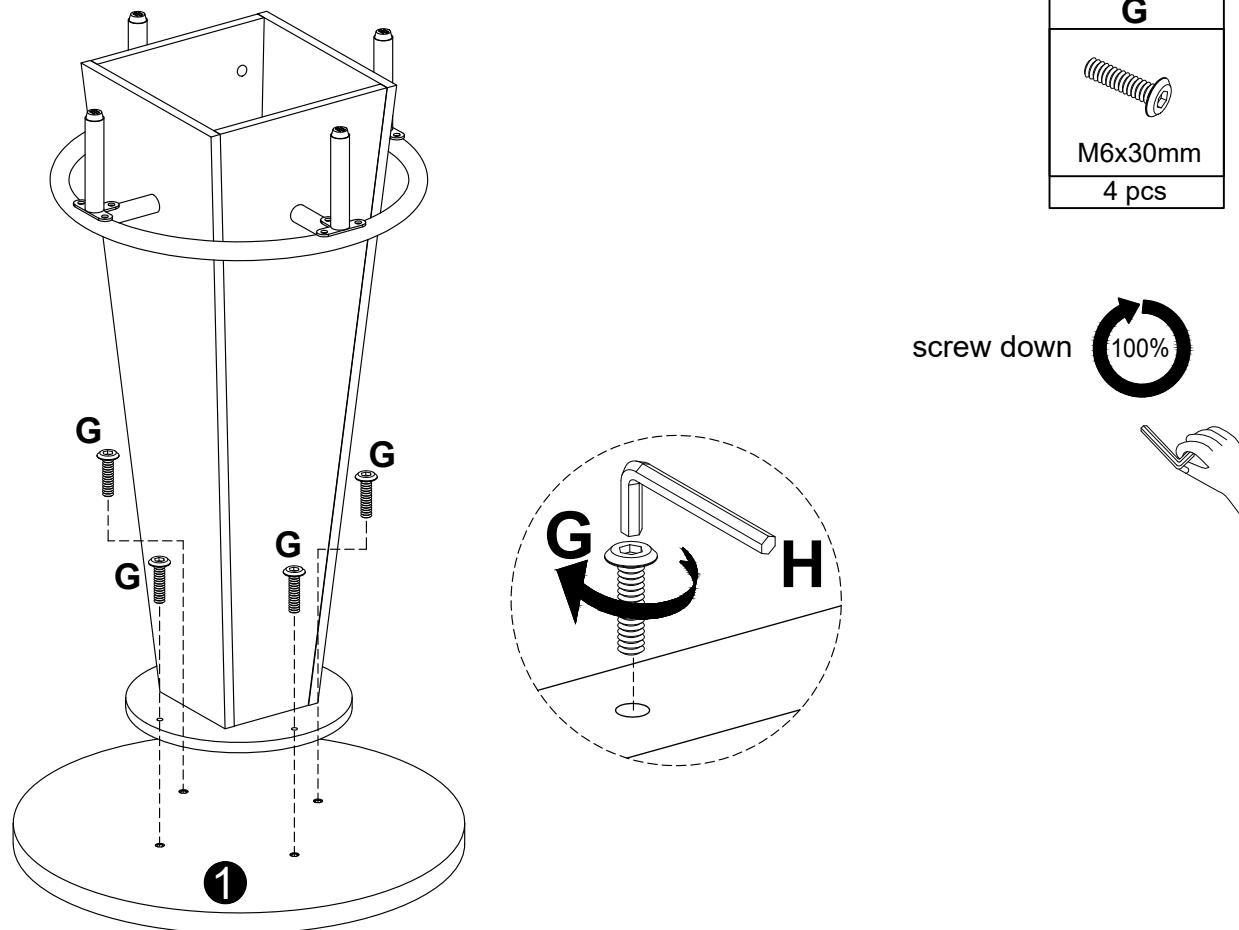

10

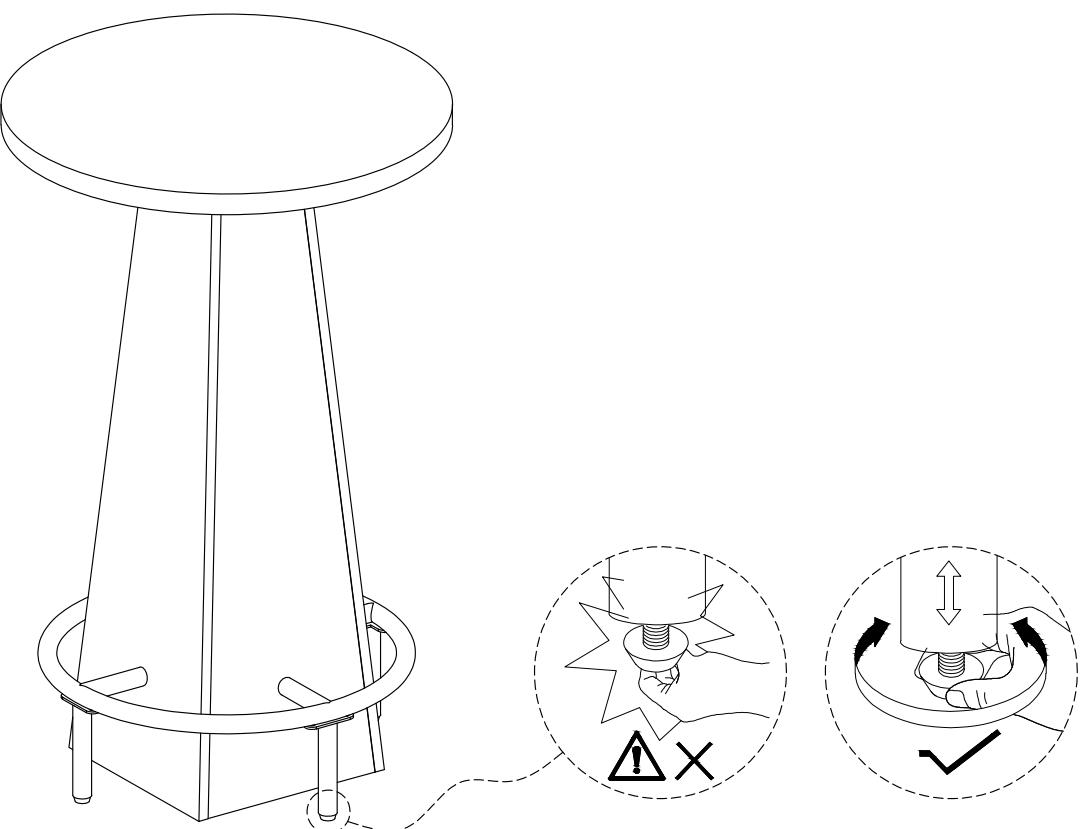

Thank you for your support!

